



GRID-CONNECTED PV INVERTER

User Manual

LHS-LV-3.6K F1
LHS-LV-5K F1
LHS-LV-6K F1



LEDVANCE.COM



LEDVANCE

CONTENTS

SAFETY INTRODUCTION	1
PRODUCT INSTRUCTIONS	2
Product overview	3
Product size	4
Product features	5
Basic system architecture	5
INSTALLATION	6
Parts list	6
Product handling requirements	7
Mounting instructions	7
Battery connection	8
Grid connection and backup load connection	14
PV connection	17
CT connection	19
Earth connection(mandatory)	21
WIFI connection	21
Wiring system for Inverter	22
Typical application diagram of diesel generator	23
Single phase parallel connection diagram	24
Three phase parallel Inverter	25
OPERATION	26
Power ON/OFF	26
Operation and display panel	26
LCD DISPLAY LCONS	27
Main screen	27
Solar power curve	29
Curve page-solar & load & grid	30
System setup menu	31
Basic setup menu	31
Battery setup menu	32
System work mode setup menu	34
Grid Setup Menu	36
The method of CEI-021 self-check	37
Generator port use setup menu	39
Advanced function setup menu	40
Device Info setup menu	41
MODE	42
FAULT INFORMATION AND PROCESSING	43
LIMITATION OF LIABILITY	46
DATASHEET	47
APPENDIX I	49
APPENDIX II	52

SAFETY INTRODUCTIONS

ABOUT THIS MANUAL








The manual mainly describes the product information, guidelines for installation, operation and maintenance. The manual cannot include complete information about the photovoltaic (PV) system.

HOW TO USE THIS MANUAL

Read the manual and other related documents before performing any operation on the inverter. Documents must be stored carefully and be available at all times.
Contents may be periodically updated or revised due to product development. The information in this manual is subject to change without notice.

SAFETY INTRODUCTIONS

LABELS DESCRIPTION

Label	Description
	Caution, risk of electric shock symbol indicates important safety instructions, which if not correctly followed, could result in electric shock.
	The DC input terminals of the inverter must not be grounded.
	Surface high temperature, Please do not touch the inverter case.
	The AC and DC circuits must be disconnected separately, and the maintenance personnel must wait for 5 minutes before they are completely powered off before they can start working.
	CE mark of conformity
	Please read the instructions carefully before use
	Symbol for the marking of electrical and electronics devices according to Directive 2002/96/EC, Indicates that the device, accessories and the packaging must not be disposed as unsorted municipal waste and must be collected separately at the end of the usage. Please follow Local Ordinances or Regulations for disposal or contact an authorized representative of the manufacturer for information concerning the decommissioning of equipment.

PRODUCT INSTRUCTIONS


- This chapter contains important safety and operating instructions. Read and keep this manual for future reference.
- Before using the inverter, please read the instructions and warning signs of the battery and corresponding sections in the instruction manual.
- Do not disassemble the inverter. If you need maintenance or repair, take it to a professional service center.
- Improper reassembly may result in electric shock or fire.
- To reduce risk of electric shock, disconnect all wires before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
- Caution: Only qualified personnel can install this device with battery.
- Never charge a frozen battery
- For optimum operation of this inverter, please follow required specification to select appropriate cable size. It is very important to correctly operate this inverter.
- Be very cautious when working with metal tools on or around batteries. Dropping a tool may cause a spark or short circuit in batteries or other electrical parts, even cause an explosion.
- Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to "Installation" section of this manual for the details.
- Grounding instructions - this inverter should be connected to a permanent grounded wiring system, Be sure to comply with local requirements and regulation to install this inverter.
- Never cause AC output and DC input short circuited. Do not connect to the mains when DC input short circuits.

PRODUCT INSTRUCTIONS

This is a multifunctional inverter, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. its comprehensive LCD display offers user configurable and easy accessible button operation such as battery charging AC/solar charging, and acceptable input voltage based on different applications.

PRODUCT INSTRUCTIONS

PRODUCT OVERVIEW

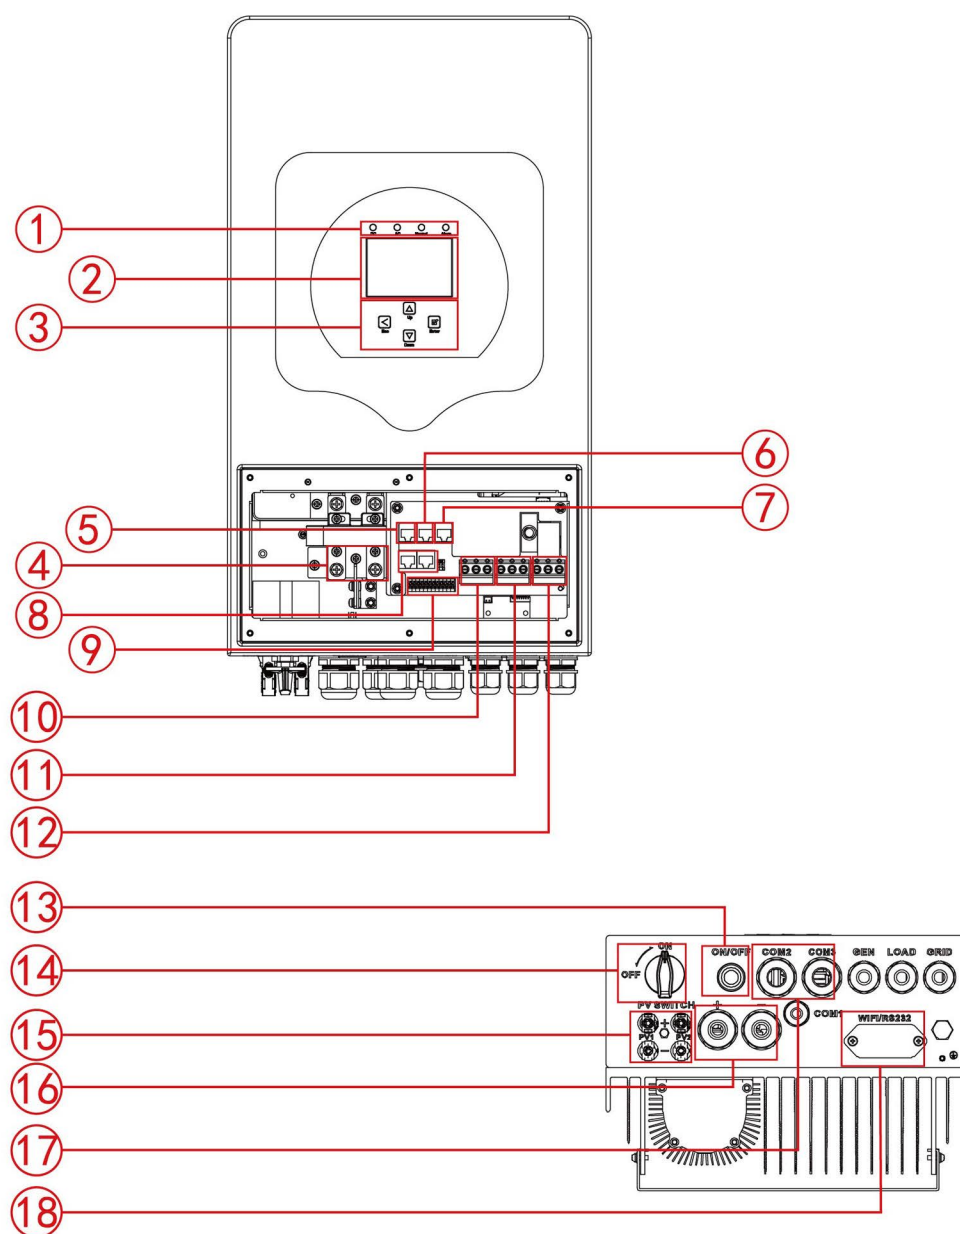



1: Inverter Indicators
2: LCD display
3: Function Buttons
4: Battery input connectors
5: RS 485/Meter Port
6: BMS 485/CAN Port

7: DRMs Port
8: Parallel port
9: Function Port
10: Generator input
11: Load
12: Grid

13: Power on/off button
14: DC Switch
15: PVinput with two MPPT
16: Battery
17: Temperature sensor
18: WiFi Interface

PRODUCT INSTRUCTIONS

 
 

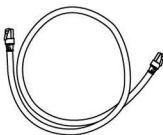


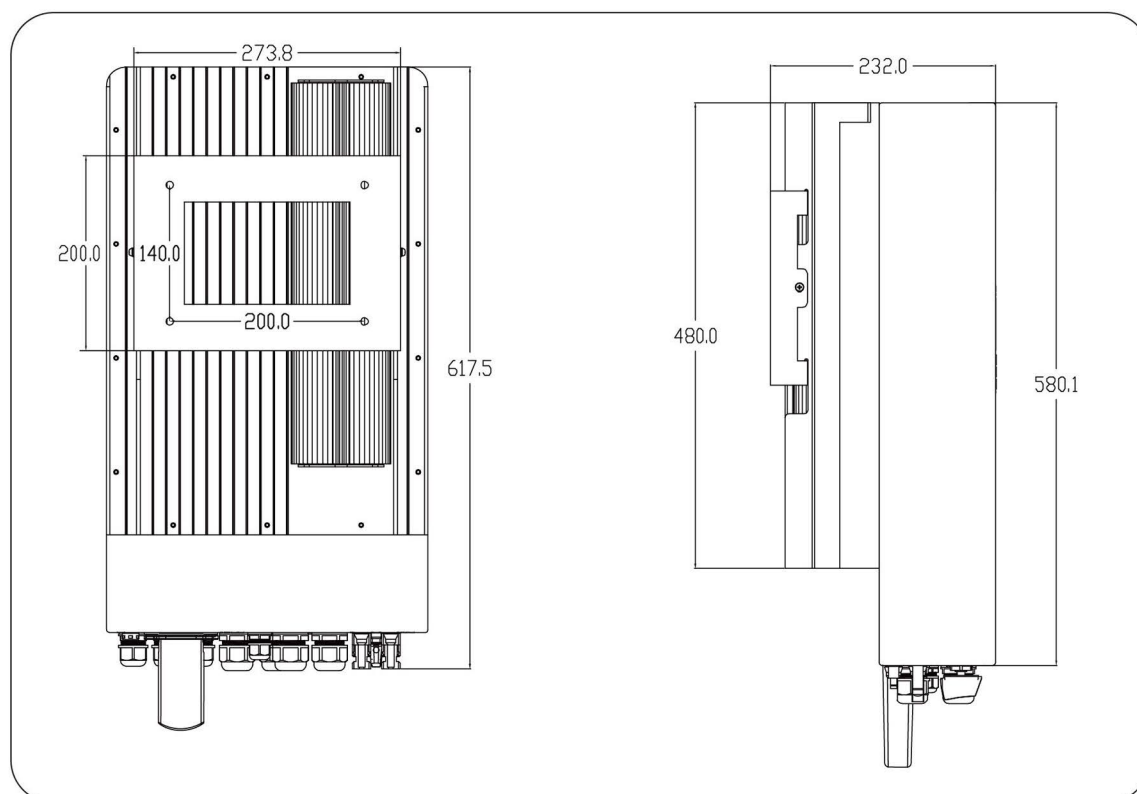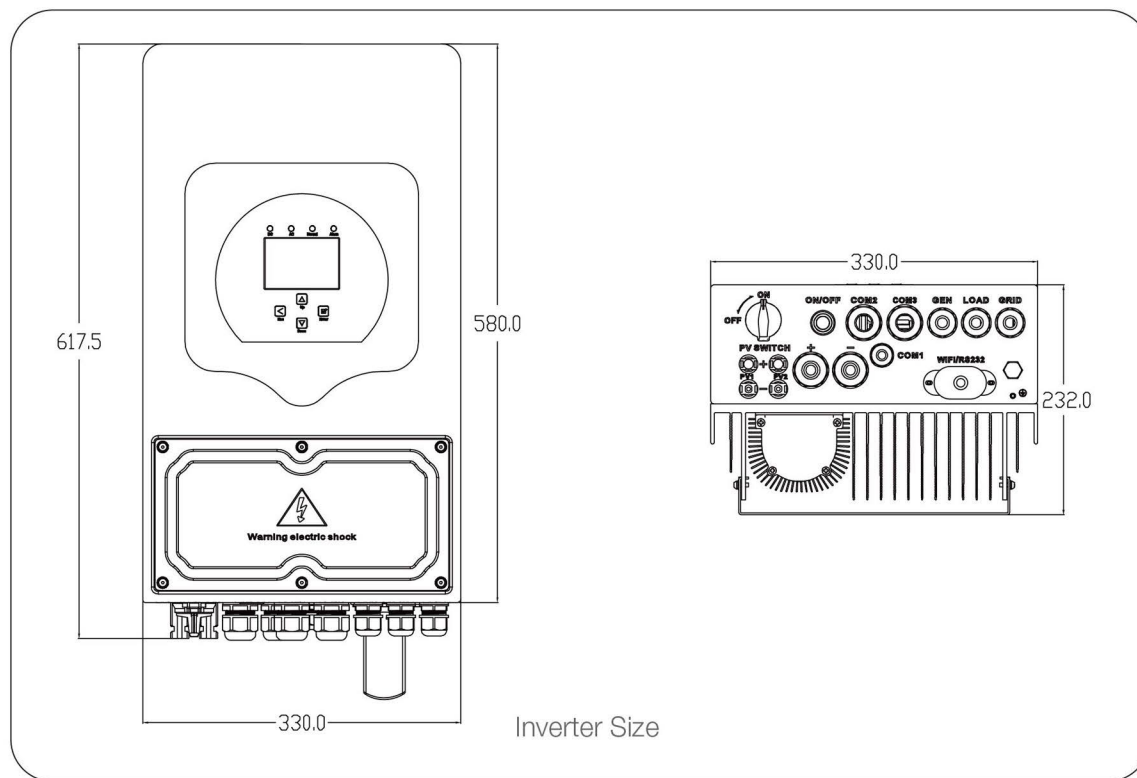
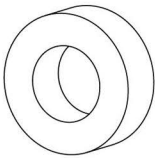
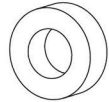 
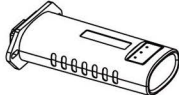 
PRODUCT SIZE



INSTALLATION

PRODUCT FEATURES

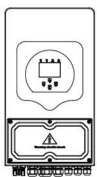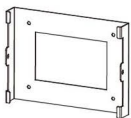
Check the equipment before installation. Please make sure nothing is damaged in the package. You should have received the items in the following package:

 <p>Hybrid inverter x1</p>	 <p>Wall mounting bracket x1</p>	 <p>Stainless steel anti-collision bolt M6*60 x4</p>	 <p>Stainless steel mounting screws M4*12 x4</p>
 <p>Parallel communication cable x1</p>	 <p>L-type Hexagon wrench x1</p>	 <p>Battery temperature sensor x1</p>	 <p>Sensor Clamp x1</p>
 <p>Quick install- ment manual</p> <p>Quick installment manual x1</p>	 <p>Magnetic ring for batteryx1</p>	 <p>Magnetic ring for BMS communication cable x1</p>	 <p>Magnetic ring X4*</p>
 <p>Datalogger x1</p>	 <p>DC+/DC- Plug connectors- including metal termina xN</p>	 <p>Solar Photovoltaic Connector special Spanner x1</p>	<p>*One for CT's output wire, another for external temperature sensor, and the other two for AC wires.</p>

INSTALLATION

PRODUCT HANDLING REQUIREMENTS

Lift the inverter out of the packing box and transport it to designated installation location.

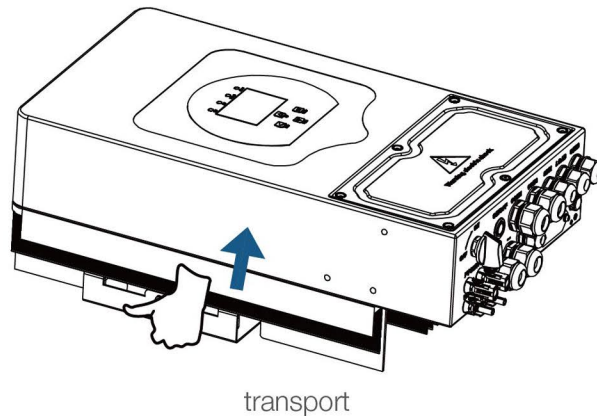

CAUTION:

Improper handling may cause personal injury!

- Arrange an appropriate number of personnel to carry the inverter according to its weight, and installation personnel should wear protective equipment such as anti-impact shoes and gloves.
- Placing the inverter directly on a hard ground may cause damage to its metal enclosure. Protective materials such as sponge pad or foam cushion should be placed underneath the inverter.
- Move the inverter by one or two people or by using a proper transport tool
- Move the inverter by holding the handles on it. Do not move the inverter by holding the terminals.


MOUNTING INSTRUCTIONS

This Hybrid inverter is designed for outdoor use (IP65). Please make sure the installation site meets the following conditions:

- Not in direct sunlight
- Not in areas where highly flammable materials are stored
- Not in potential explosive areas
- Not in the cool air directly
- Not near the television antenna or antenna cable
- Not higher than an altitude of about 2000 meters above sea level
- Not in an environment of precipitation or humidity > 95%


INSTALLATION

Please AVOID direct sunlight, rain exposure, snow laying up during installation and operation. Before connecting all wires, please take off the metal cover by removing screws as shown below:

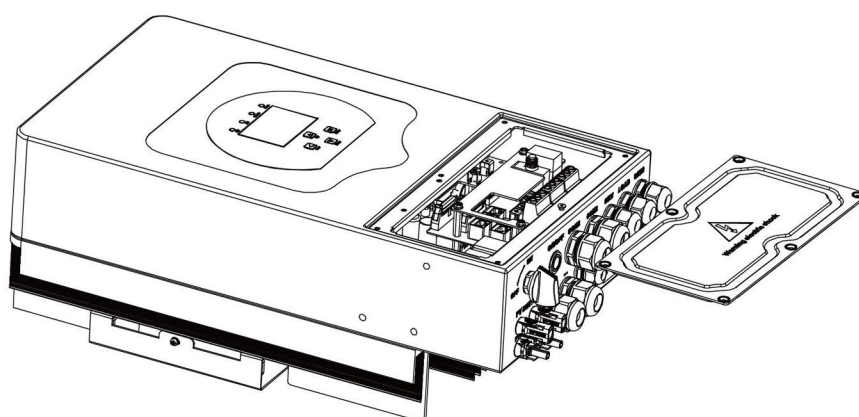


INSTALLATIONS TOOLS


Installation tools can refer to the following recommended ones. Also, use other auxiliary toolson site.

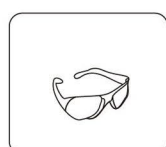


Protective goggles

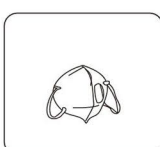

Earplugs

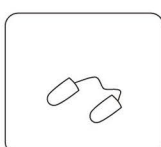


Anti-dust mask

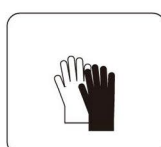


Work gloves




Work shoes

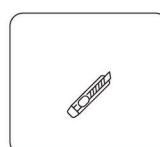


Utility Knife

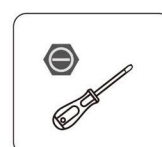

Slotted screwdriver

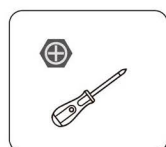


Cross screwdriver

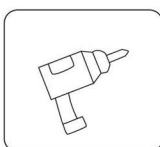


Percussion drill



Pliers

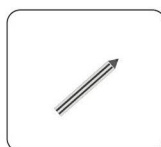


Marker

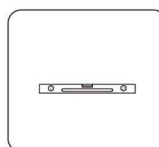

Level




Rubber hammer

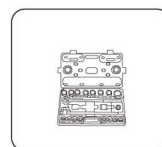


socket wrenches set




Anti-static wrist strap

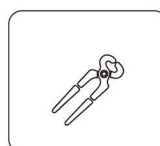


Wire cutter

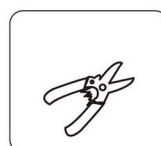


Wire stripper

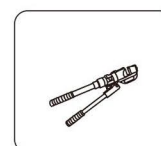


Hydraulic pliers

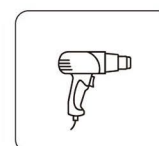


Heatt gun

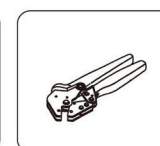


Crimping tool
4-6mm²

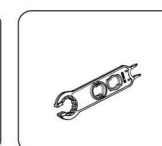

Solar connector
wrench

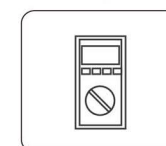

Multimeter>1100
Vdc

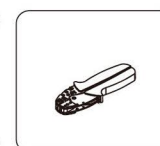


RJ45 crimping
plier



Cleaner


INSTALLATION

Please AVOID direct sunlight, rain exposure, snow laying up during installation and operation. Before connecting all wires, please take off the metal cover by removing screws as shown below:

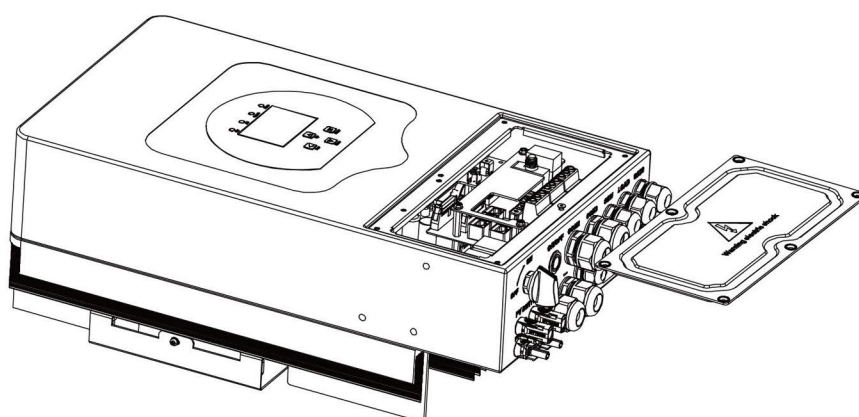


INSTALLATIONS TOOLS


Installation tools can refer to the following recommended ones. Also, use other auxiliary toolson site.

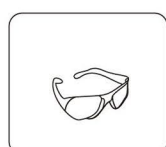


Protective goggles

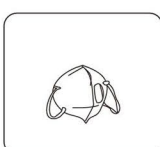

Earplugs

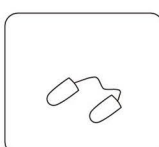


Anti-dust mask

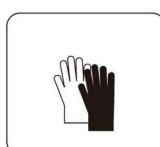


Work gloves




Work shoes

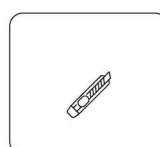


Utility Knife

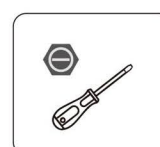


Slotted screwdriver

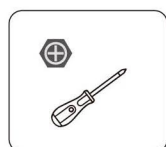


Cross screwdriver

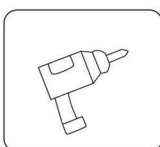


Percussion drill

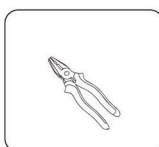


Pliers

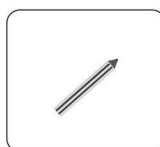


Marker

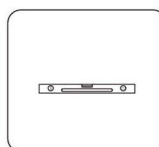

Level

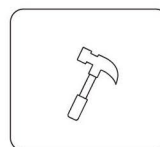


Rubber hammer

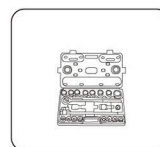


socket wrenches set




Anti-static wrist strap

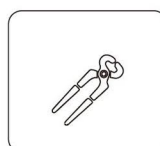


Wire cutter

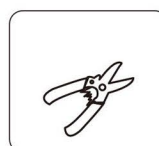


Wire stripper

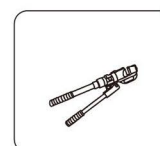


Hydraulic pliers

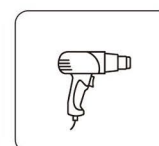

Heatt gun

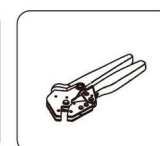


Crimping tool
4-6mm²

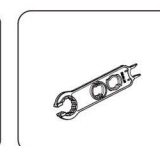

Solar connector wrench



Multimeter>1100
Vdc

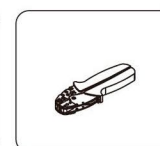


RJ45 crimping
plier




Cleaner

INSTALLATION

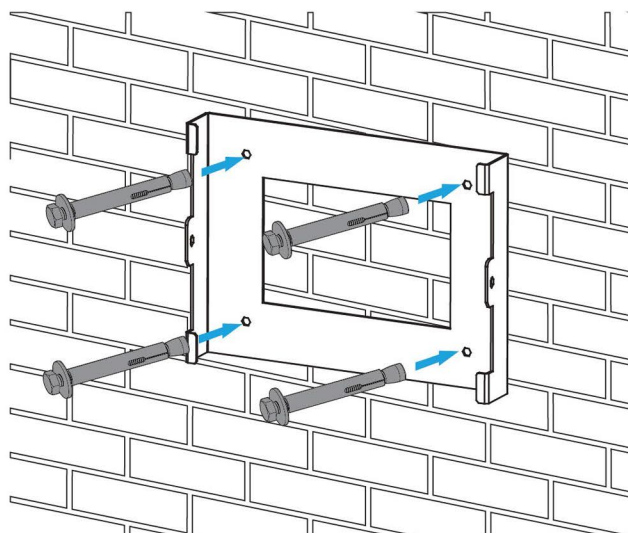

Inverter hanging plate installation

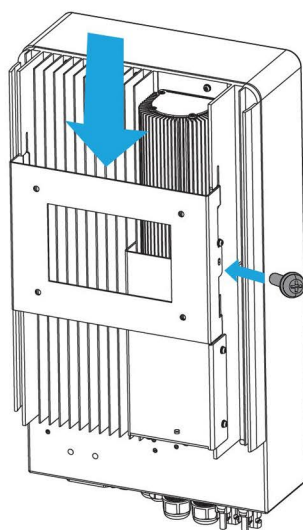

BATTERY CONNECTION

For safe operation and compliance, a separate DC over-current protector or disconnect device is required between the battery and the inverter. In some applications, switching devices may not be required but over-current protectors are still required. Refer to the typical amperage in the table below for the required fuse or circuit breaker size.

Model	Wire Size	Cable(mm ²)	Torque value(max)
3.6KW	2AWG	25	5.2Nm
5KW	1AWG	35	5.2Nm
6KW	0AWG	50	5.2Nm

INSTALLATION




All wiring must be performed by a professional person.



Connecting the battery with a suitable cable is important for safe and efficient operation of the system. To reduce the risk of injury, refer to Chart 3-2 for recommended cables.

Please follow below steps to implement battery connection:

- Please choose a suitable battery cable with correct connector which can well fit into the battery terminals.
- Use a suitable screwdriver to unscrew the bolts and fit the battery connectors in, then fasten the bolt by the screwdriver, make sure the bolts are tightened with torque of 5.2 Nm in clockwise direction.
- Make sure polarity at both the battery and inverter is correctly connected.

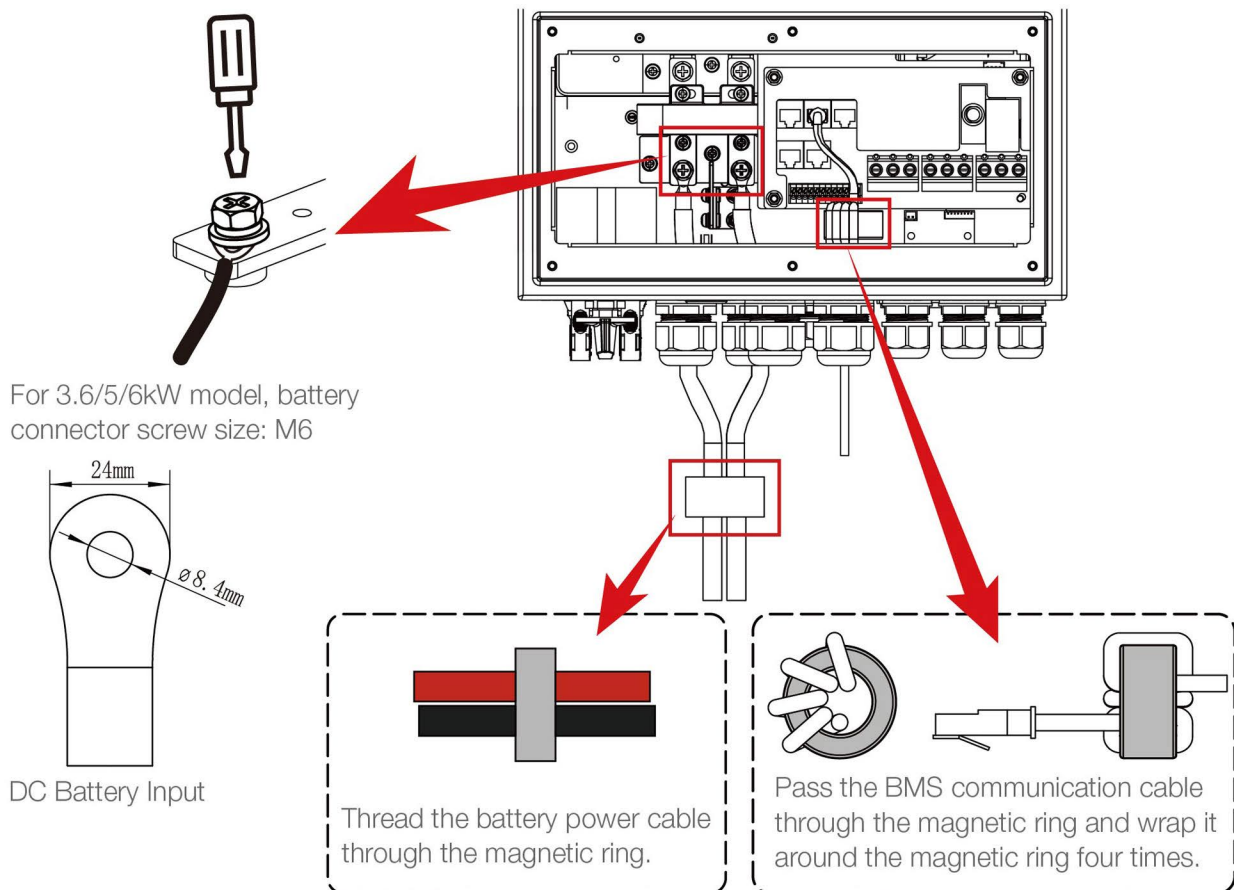

- In case of children touch or insects go into the inverter, Please make sure the invert connector is fasten to waterproof position by twist it clockwise.




Installation must be performed with care.



Before making the final DC connection or closing DC breaker/disconnect, be sure positive(+) must be connect to positive(+) and negative(-) must be connected to negative(-). Reverse polarity connection on battery will damage the inverter.


INSTALLATION

FUNCTION PORT DEFINITION

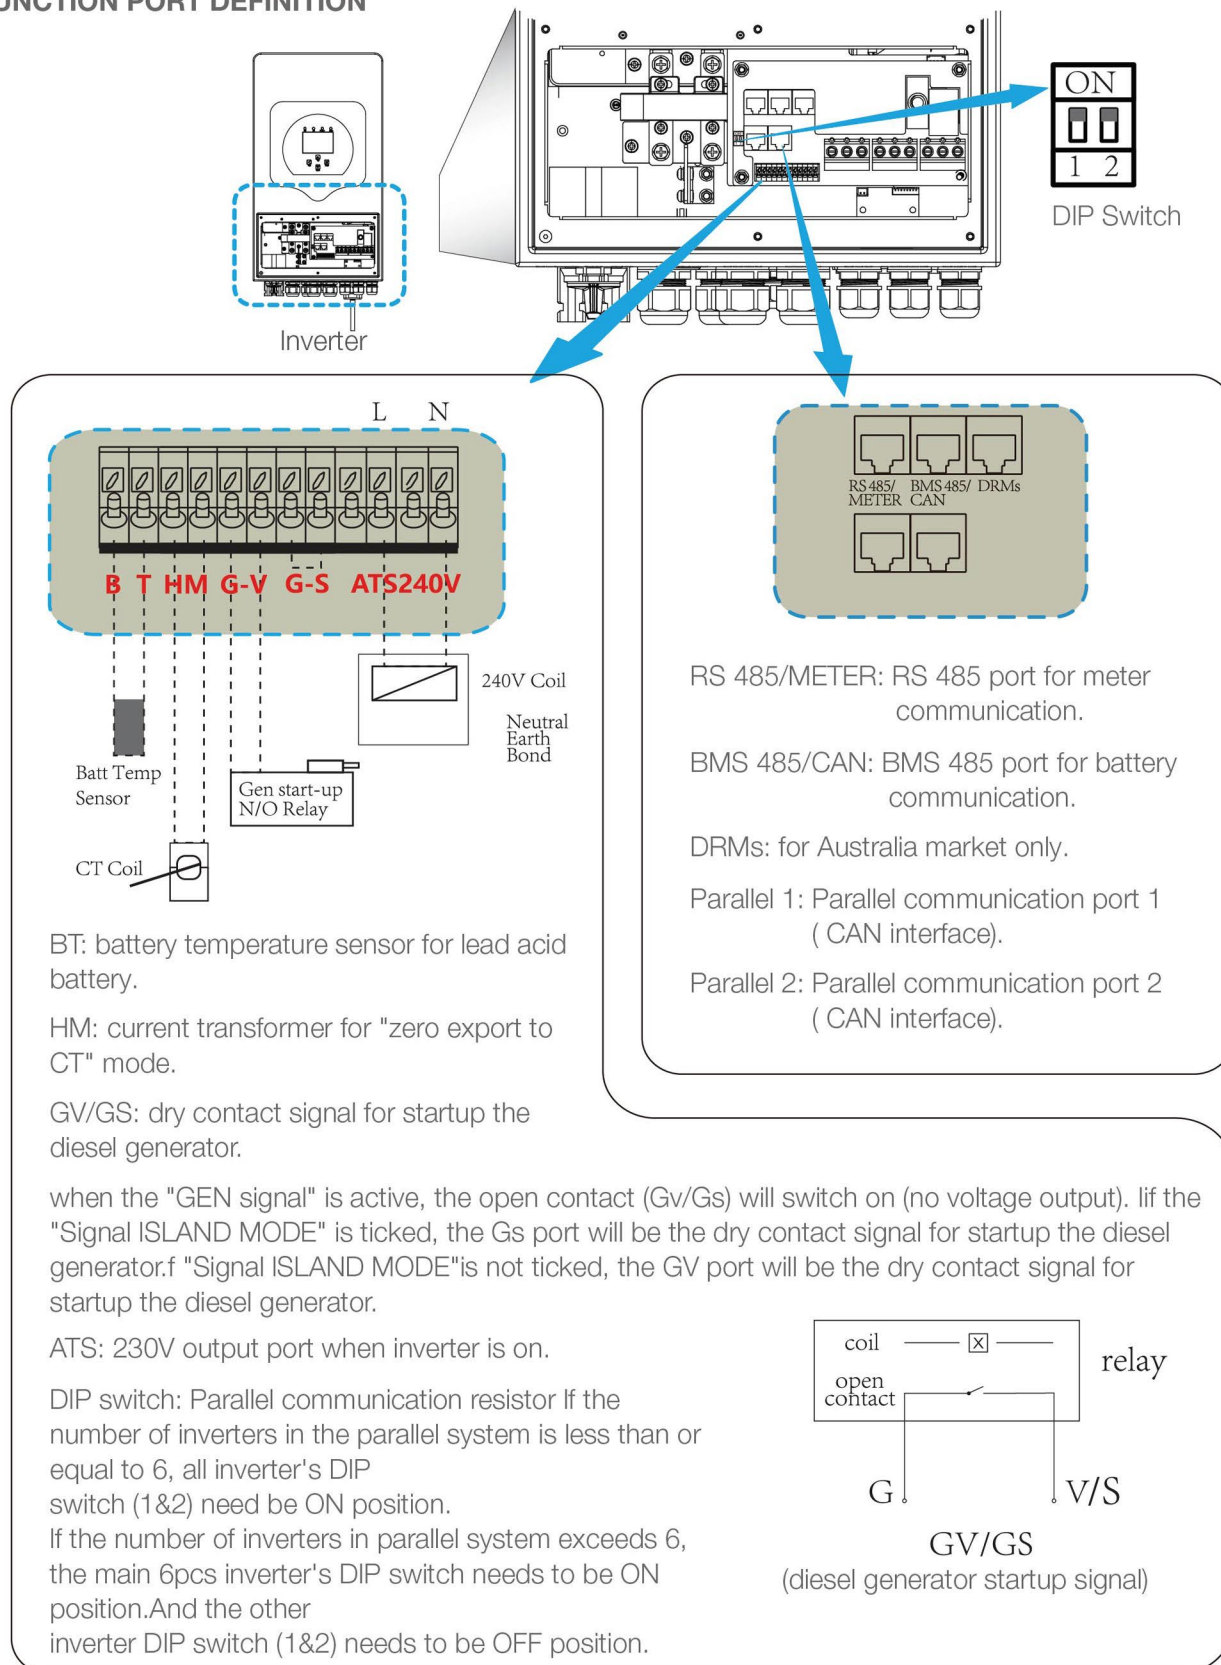

INSTALLATION

TEMPERATURE SENSOR CONNECTION FOR LEAD-ACID BATTERY

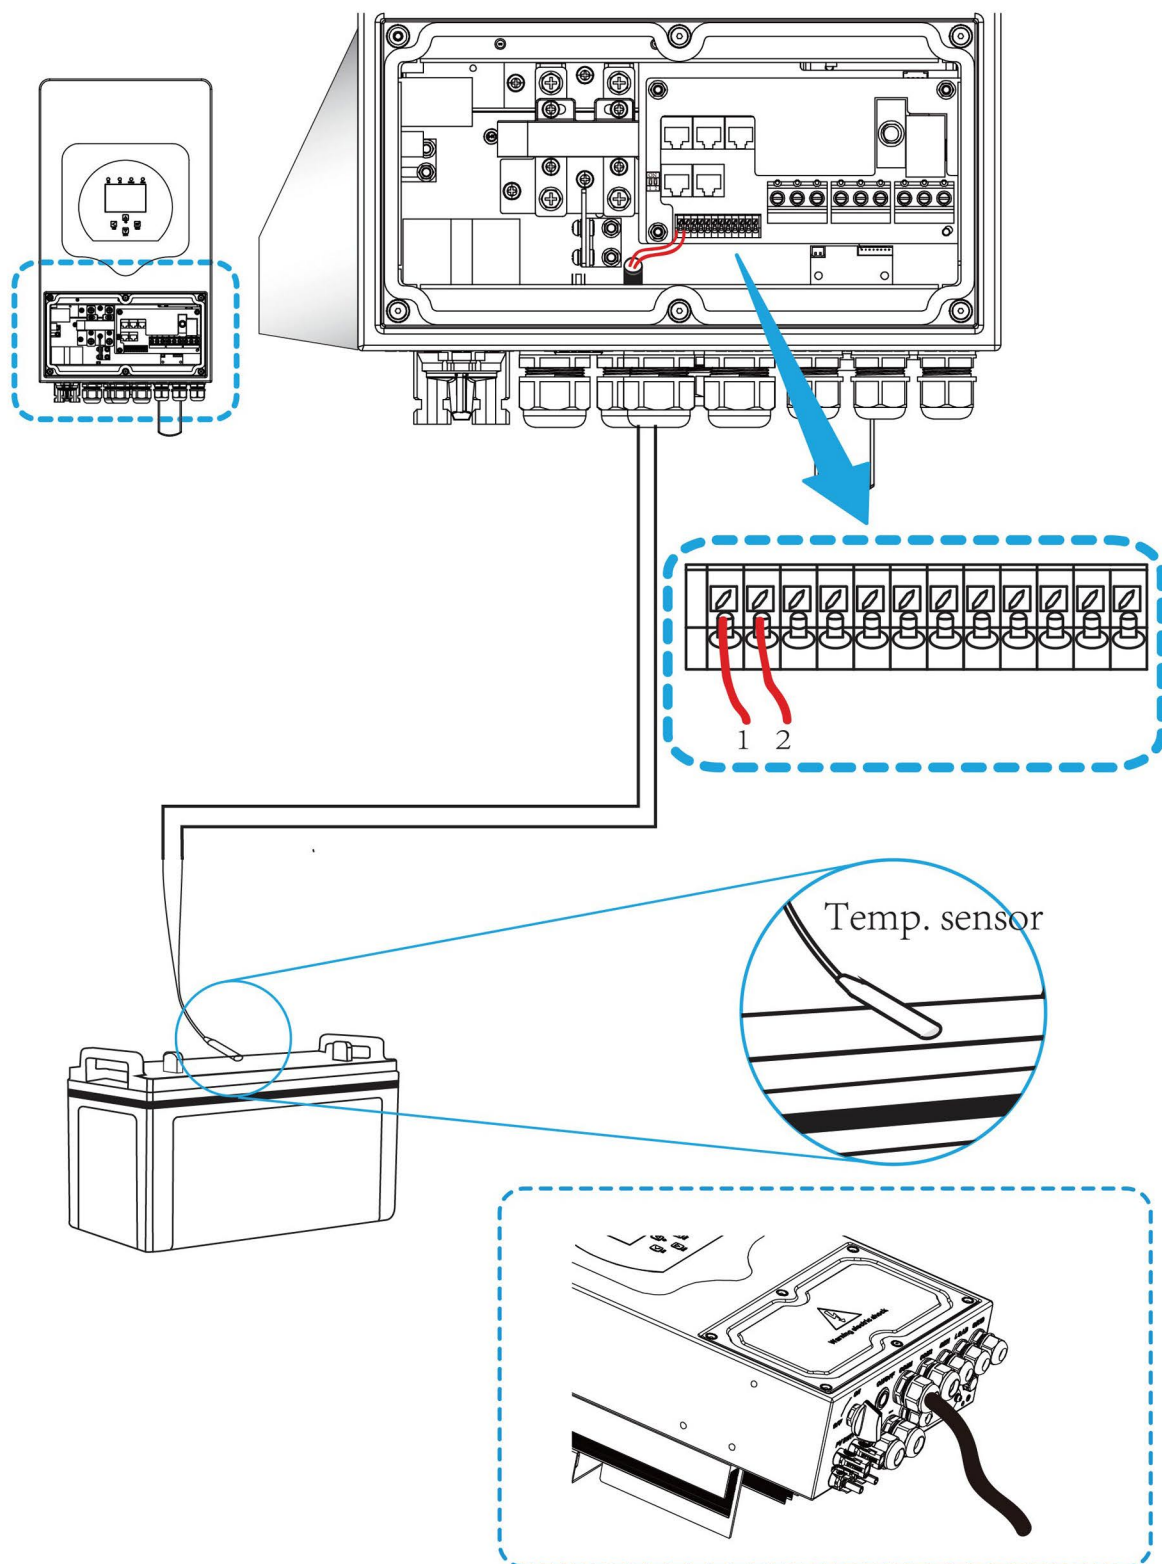

INSTALLATION

GRID CONNECTION AND BACKUP LOAD CONNECTION

- Before connecting to the grid, a separate AC breaker must be installed between the inverter and the grid, and also between the backup load and the inverter. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current. For the 3.6/5/6kW model, the recommended AC breaker for backup load is 40A. For the 3.6/5/6kW model, the recommended AC breaker for grid is 40A.
- There are three terminal blocks with "Grid" "Load" and "GEN" markings. Please do not misconnect input and output connectors.



Note:

In final installation, breaker certified according to IEC 60947-1 and IEC 60947-2 shall be installed with the equipment.

All wiring must be performed by a qualified personnel. It is very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable as below.

Grid connection and backup load connection (Copper wires)

Model	Wire Size	Cable(mm ²)	Torque value(max)
3.6/5KW	12AWG	2.5	1.2Nm
6KW	10AWG	4	1.2Nm

Grid connection and backup load connection (Copper wires)


Model	Wire Size	Cable(mm ²)	Torque value(max)
3.6/5/6KW	8AWG	6	1.2Nm

Chart 3-3 Recommended Size for AC wires

PLEASE FOLLOW BELOW STEPS TO IMPLEMENT AC INPUT/OUTPUT CONNECTION:

- Before making Grid, load and Gen port connection, be sure to turn off AC breaker disconnect first.
- Remove insulation sleeve 10mm length, unscrew the bolts. For GRID port, just insert the wires into the terminals according to polarities indicated on the terminal block. For GEN and Load ports, thread the wires through the magnetic ring firstly, then insert these wires into the terminals according to polarities indicated on the terminal block. Tighten the terminal screws and make sure the wires are completely and safely connected.

INSTALLATION

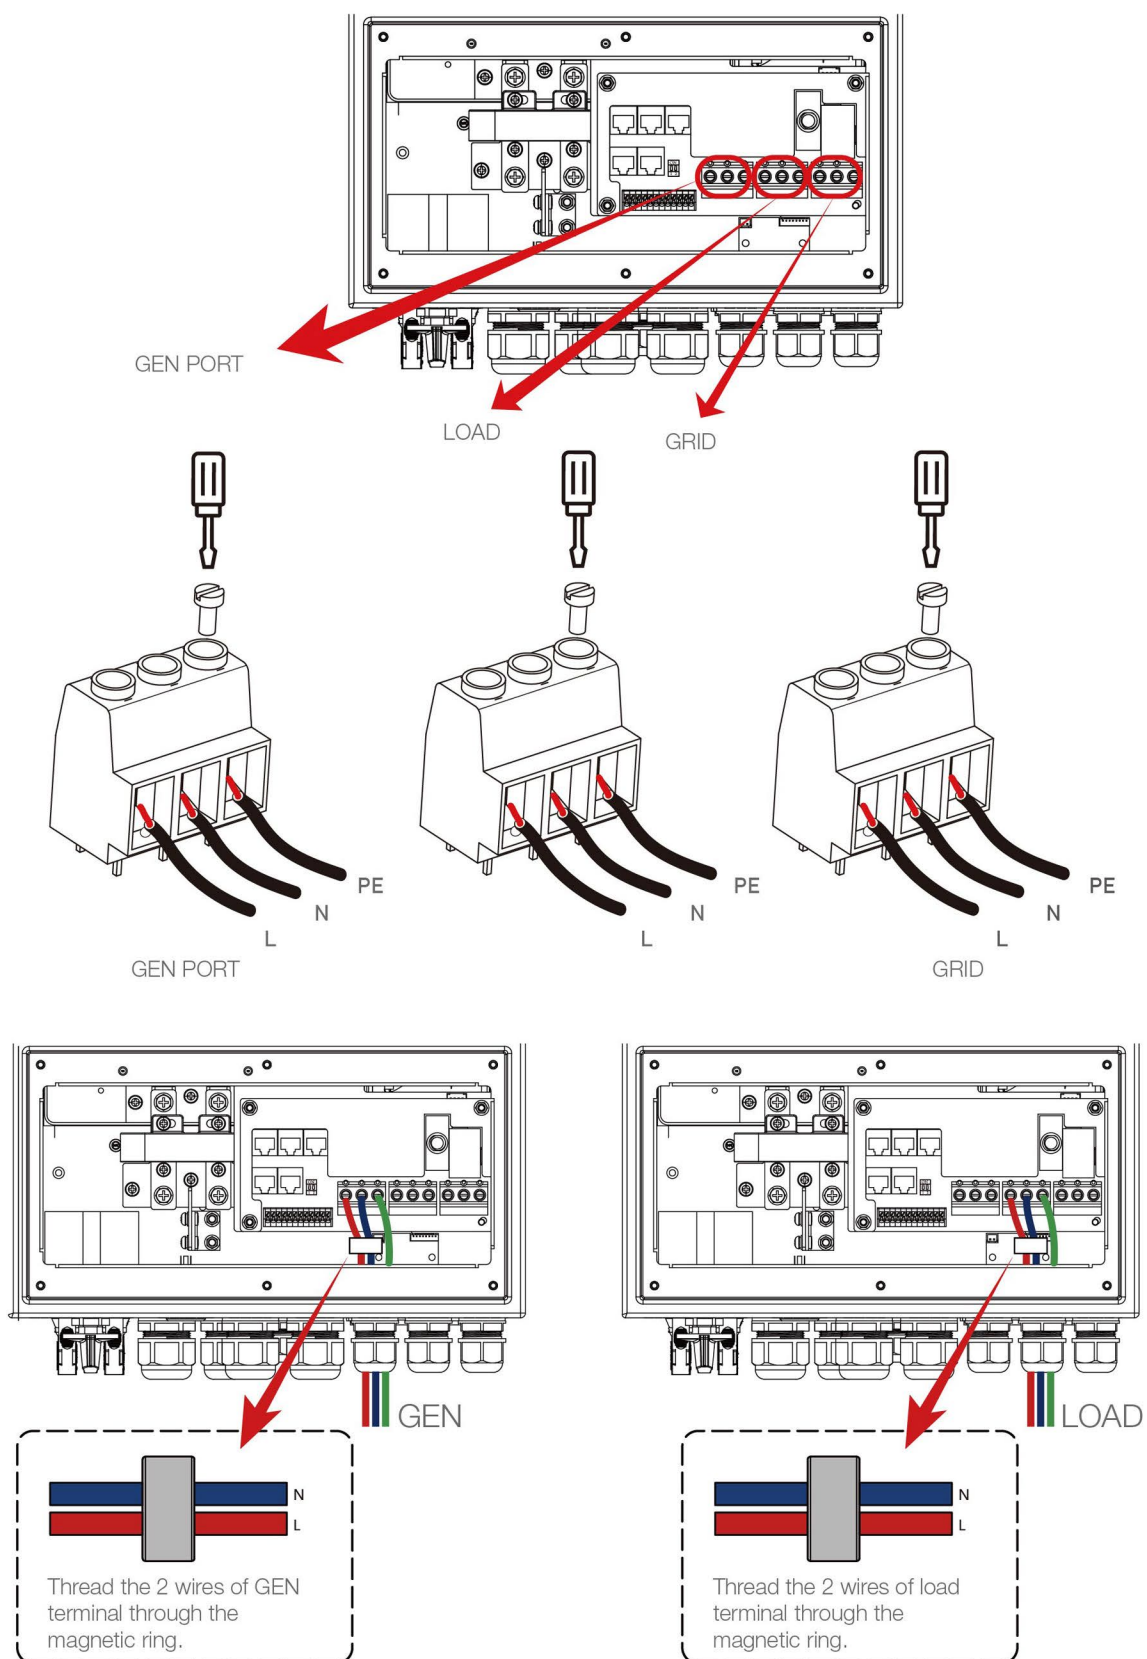

INSTALLATION



Be sure that AC power source is disconnected before attempting to wire it to the unit.

- Then, insert AC output wires according to polarities indicated on the terminal block and tighten terminal. Be sure to connect corresponding N wires and PE wires to related terminals as well.
- Make sure the wires are securely connected.
- Appliances such as air conditioner are required at least 2-3 minutes to restart because it is required to have enough time to balance refrigerant gas inside of circuit. If a power shortage occurs and recovers in short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it is equipped with time-delay function before installation. Otherwise, this inverter will trigger overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner

PV CONNECTION

Before connecting to PV modules, please install a separately DC circuit breaker between inverter and PV modules. It is very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Wire Size	Cable(mm ²)
3.6/5/6KW	12AWG	4

Chart 3-4 Cable size



To avoid any malfunction, do not connect any PV modules with possible current leakage to the inverter. For example, grounded PV modules will cause current leakage to the inverter. When using PV modules, please ensure the PV+ & PV- of solar panel is not connected to the system ground bar.



It is requested to use PV junction box with surge protection. Otherwise, it will cause damage on inverter when lightning occurs on PV modules.

INSTALLATION

PV MODULE SELECTION:

When selecting proper PV modules, please be sure to consider below parameters:

- Open circuit -Voltage (Voc) of PV-modules not exceeds max. PV array open circuit voltage of inverter.
- Open circuit Voltage (Voc) of PV modules should be higher than min. start voltage.
- The PV modules used to connected to this inverter shall be Class A rating certified accord ingto IEC 61730.

Inverter Model	3.6KW	5KW	6KW
PV Input Voltage	370V (125V-500V)		
PV Array MPPT Voltage Range	150V-425V		
No.of MPP Trackers	2		
No.of Strings per MPP Tracker	1+1		

Chart 3-5

PV MODULE WIRE CONNECTION:

- Switch the Grid Supply Main Switch(AC)OF
- Switch the DC Isolator OF
- Assemble PV input connector to the inverte



Safety Hint:

When using PV modules, please ensure the PV+ & PV- of solar panel is not connected to the system ground bar.



 
Safety Hint:

Before connection, please make sure the polarity of the output voltage of PV array matches the "DC+" and "DC-" symbols.




Safety Hint:

Before connecting inverter, please make sure the PV array open circuit voltage is within the 500V of the inverter.

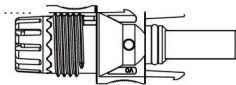

Pic 3.1 DC+ male connector

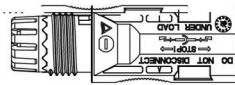 

Pic 3.2 DC- female connector

INSTALLATION




Safety Hint:

Please use approved Dc cable for PV system.


The steps to assemble the DC connectors are listed as follows

- Strip off the DC wire about 7mm, disassemble the connector cap nut(see picture 3.3).

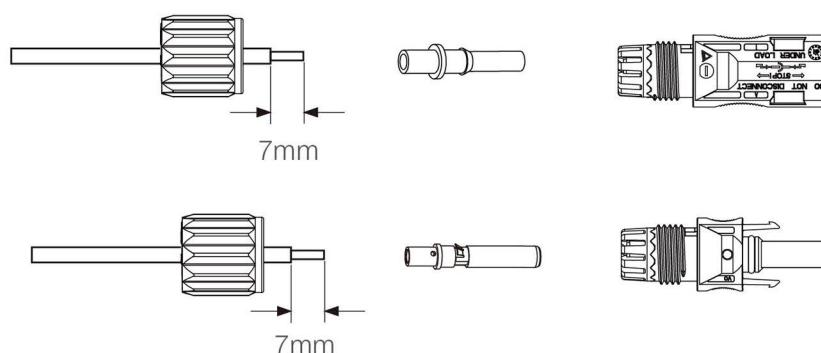


Pic 3.3 Disassemble the connector cap nut

- Crimping metal terminals with crimping pliers as shown in picture 3.4

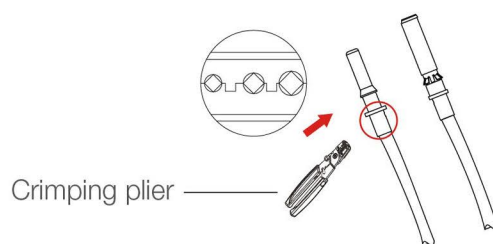

Pic 3.4 Crimp the contact pin to the wire


- Insert the contact pin to the top part of the connector and screw up the cap nut to the top part of the connector. (as shown in picture 3.5).

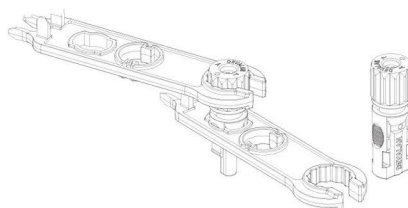

Pic 3.3 Disassemble the connector cap nut

INSTALLATION

- Finally insert the DC connector into the positive and negative input of the inverter, shown as picture 3.6.

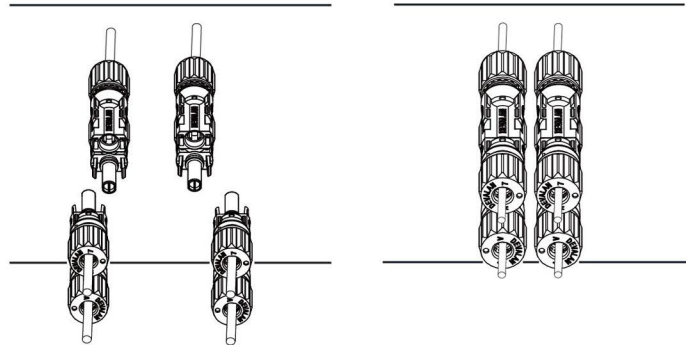


Pic 3.6 DCinput connection



Safety Hint:

Sunlight shines on the panel will generate voltage, high voltage in series may cause danger to life. Therefore, before connecting the Dc input line, the solar panel needs to be blocked by the opaque material and the DC switch should be 'OFF', otherwise, the high voltage of the inverter may lead to life-threatening conditions.


CT CONNECTION

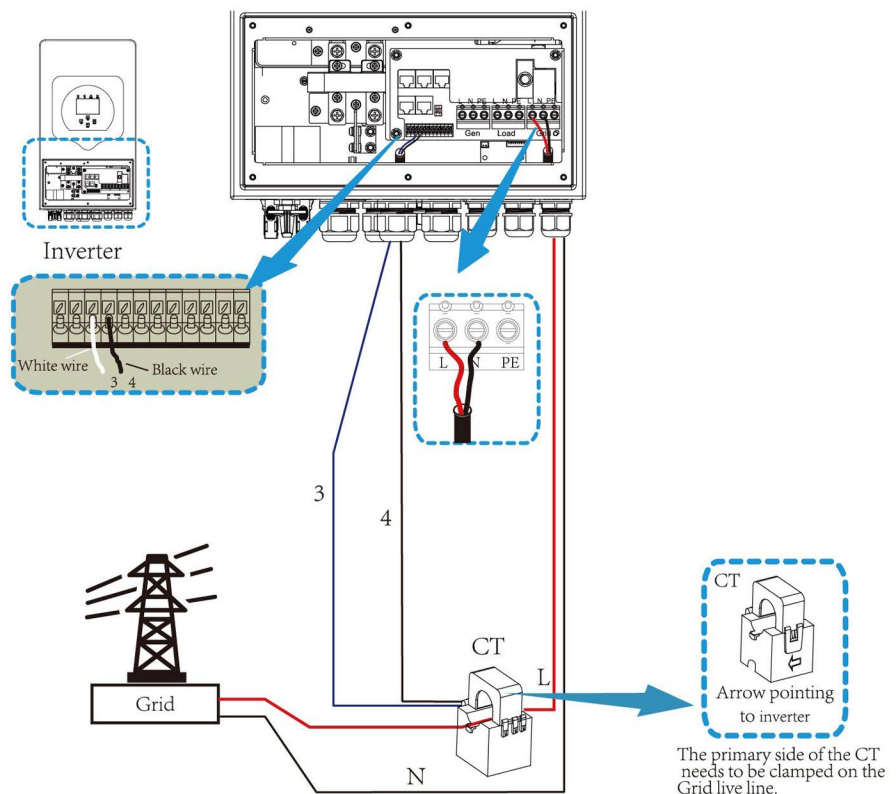

***Note:** when the reading of the load power on the LCD is not correct, please reverse the CT arrow.

INSTALLATION


METER CONNECTION

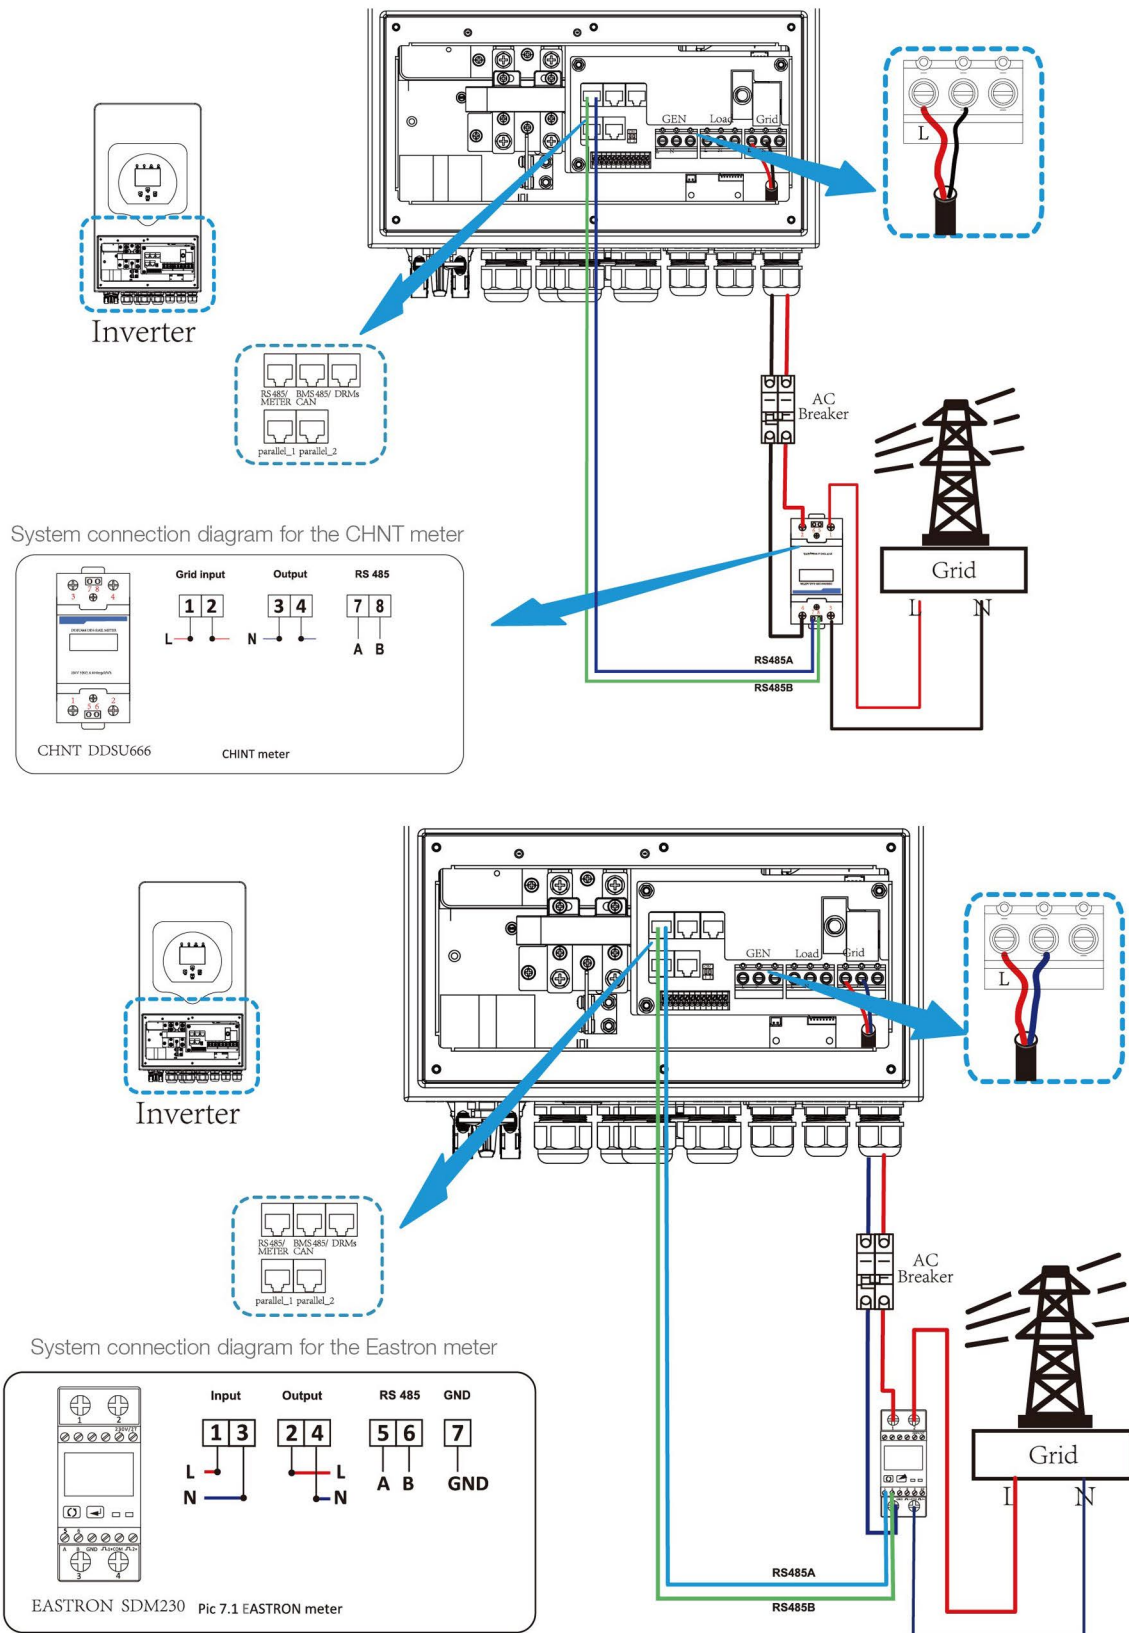

INSTALLATION

EARTH CONNECTION(MANDATORY)

Ground cable shall be connected to ground plate on grid side, this prevents electric shock if the original protective conductor fails.

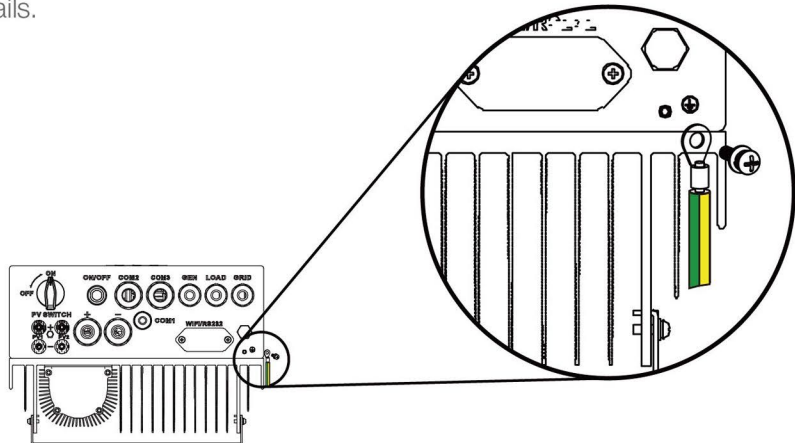

Earth connection (Copper wires)

Model	Wire Size	Cable(mm²)	Torque value(max)
3.6/5KW	12AWG	2.5	1.2Nm
6KW	10AWG	4	1.2Nm

Earth connection (Copper wires) (Bypass)

Model	Wire Size	Cable(mm²)	Torque value(max)
3.6/5/6KW	8AWG	6	1.2Nm



Warning:



Inverter has built-in leakage current detection circuit, The type A RCD can be connected to the inverter for protection according to the local laws and regulations.
If an external leakage current protection device is connected, its operating current must be equal to 300 mA or higher, otherwise inverter may not work properly.

WIFI CONNECTION

For the configuration of Wi-Fi Plug, please refer to illustrations of the Wi-Fi Plug.

INSTALLATION

WIRING SYSTEM FOR INVERTER

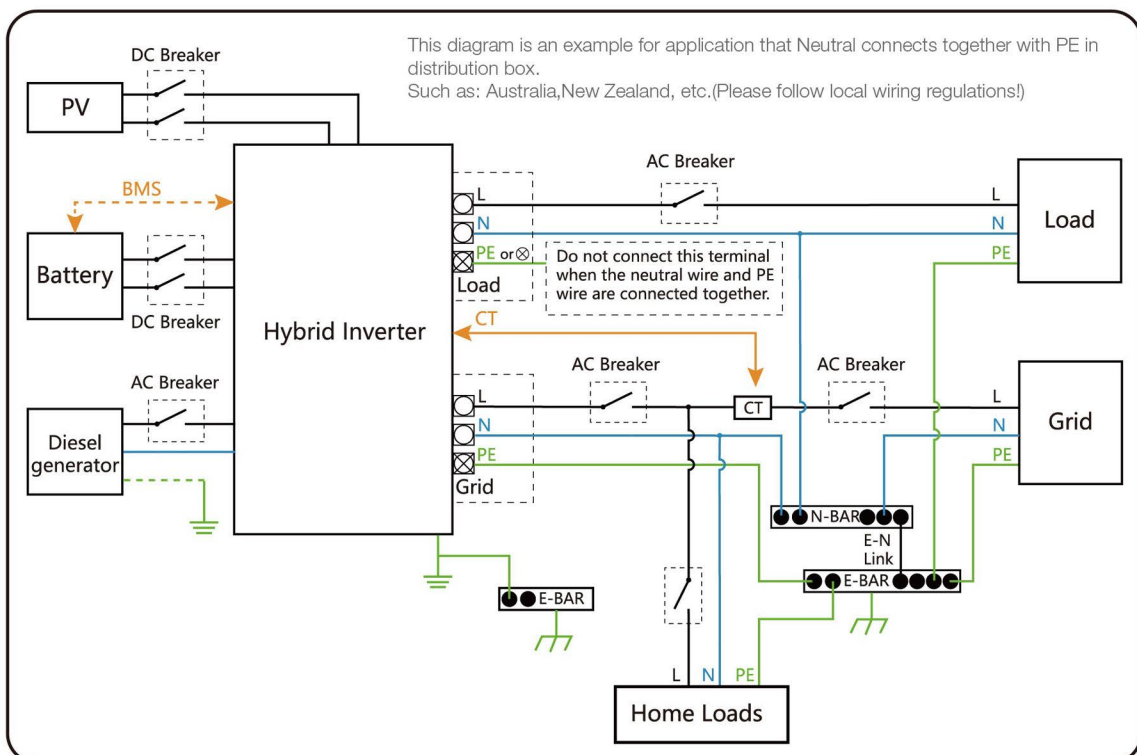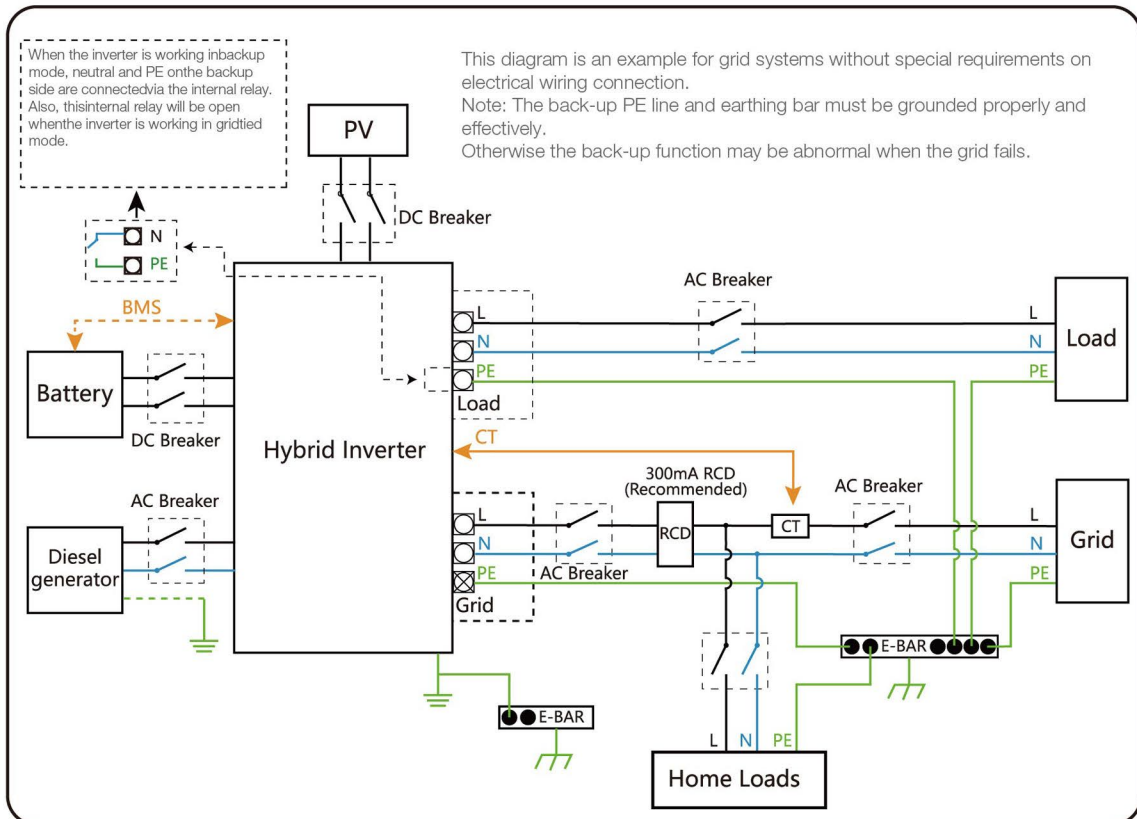


(REGION:EU)



INSTALLATION


SINGLE PHASE PARALLEL CONNECTION DIAGRAM

— CAN — L wire — N wire — PE wire

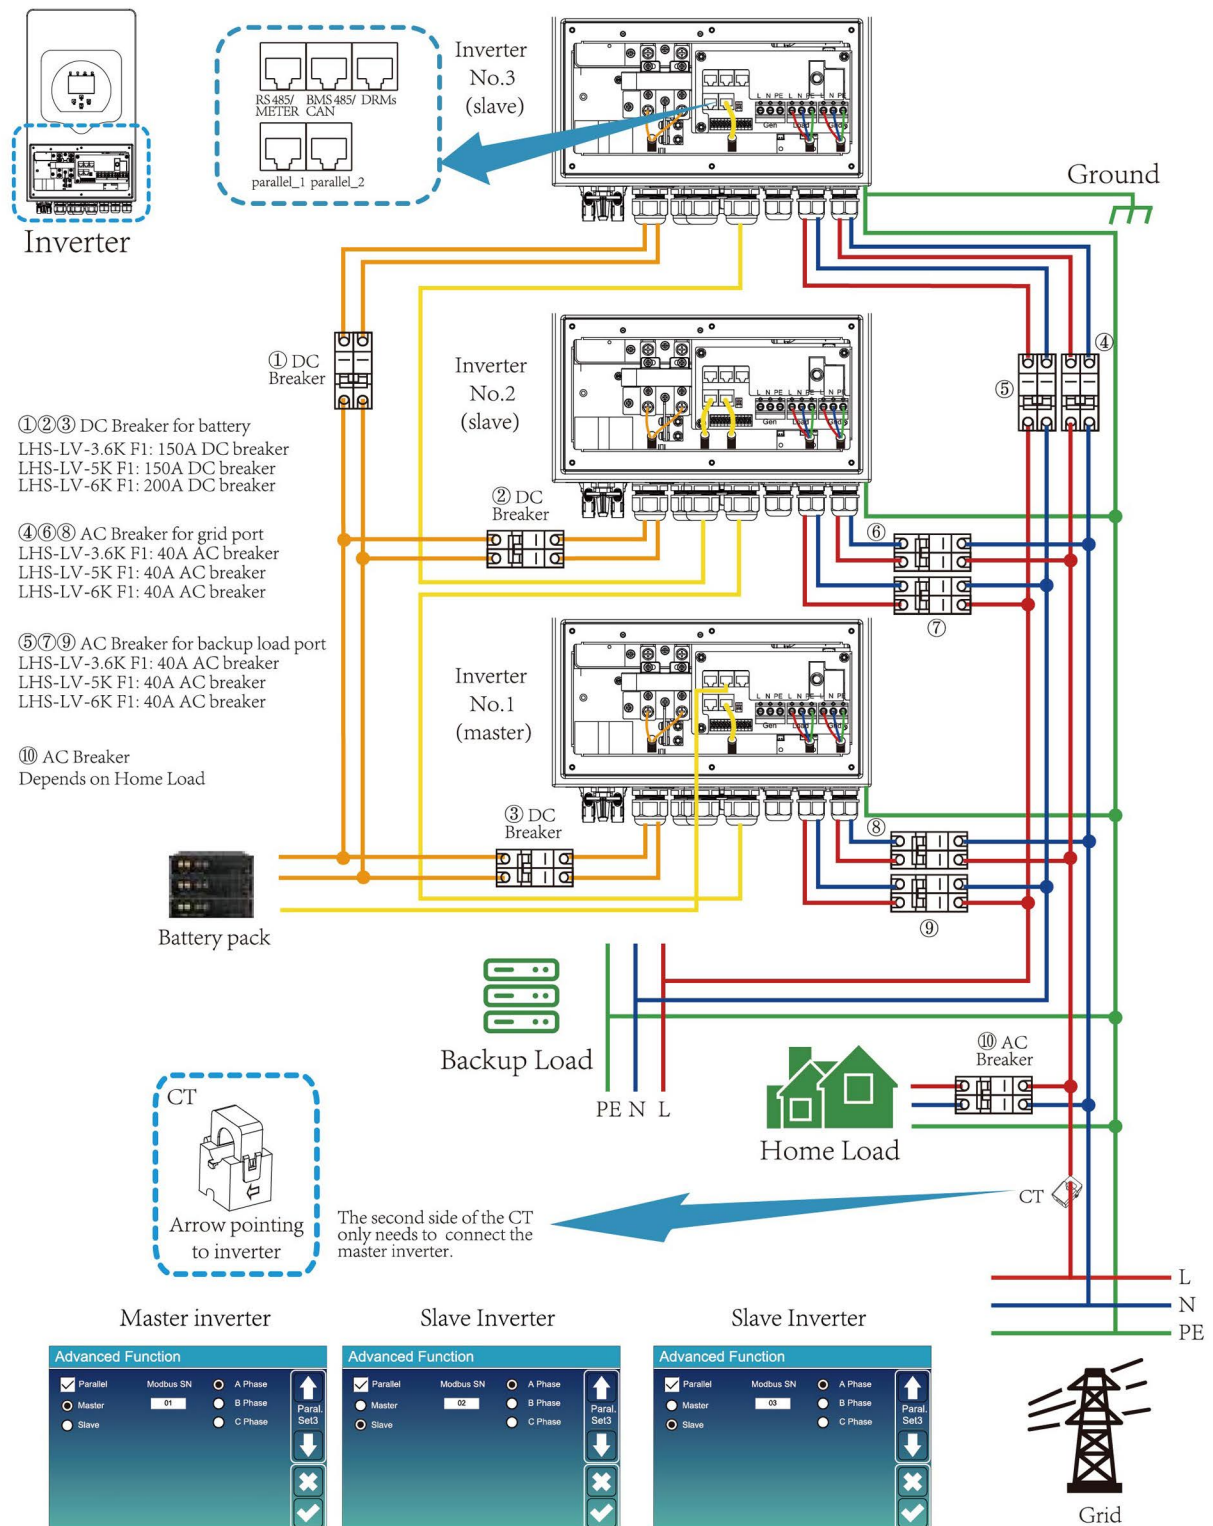

INSTALLATION

THREE PHASE PARALLELINVERTER

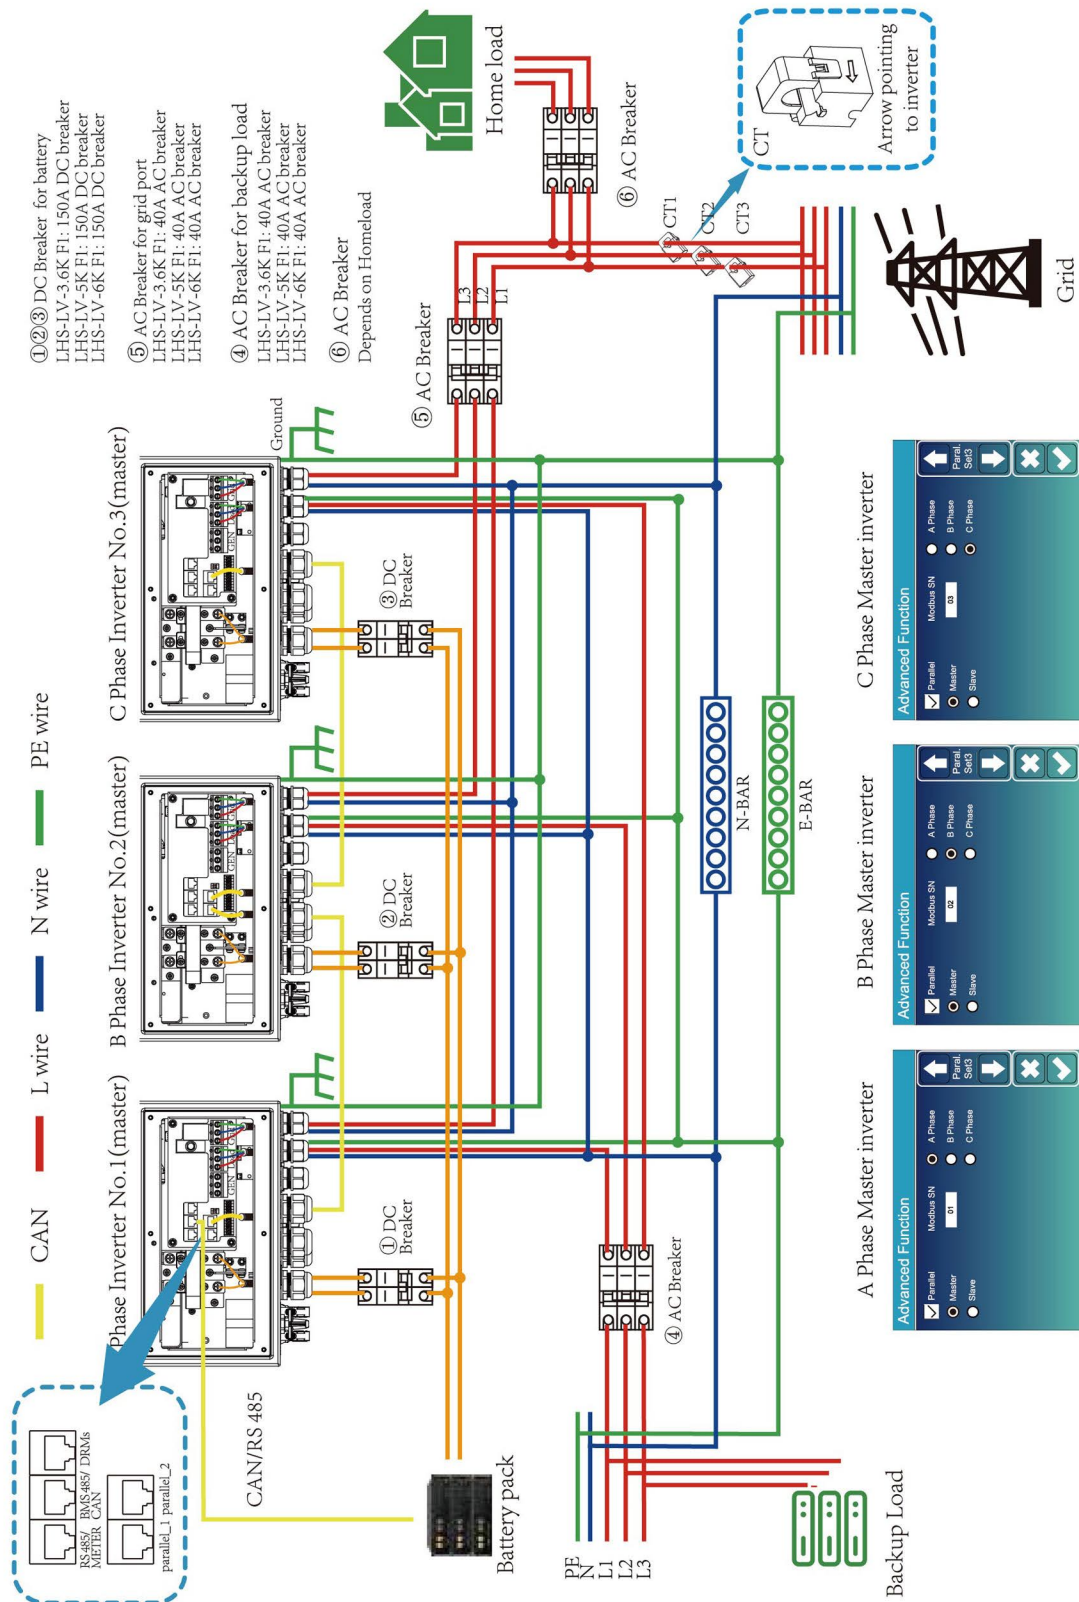

OPERATION

POWER ON/OFF

Once the unit has been properly installed and the batteries are connected well, simply press On/Off button(located on the left side of the case) to turn on the unit. When system without battery connected, but connect with either PV or grid, and ON/OFF button is switched off, LCD will still light up(Display will show OFF), In this condition, when switch on ON/OFF button and select NO battery, system can still work.

OPERATION AND DISPLAY PANEL

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes four indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

LED Indicator		Messages
DC	Green led solid light	PV Connection normal
AC	Green led solid light	Grid Connection normal
Norma	Green led solid light	Inverter operating norma
Alarm	Red led solid light	Malfunction or warning

Chart 4-1 LED indicators


Function Key	Description
ESC	To exit setting mode
Up	To go to previous selection
Down	To go to next selection
Enter	To confirm the selection

Chart 4-2 Function Buttons

LCD DISPLAY LCONS

MAIN SCREEN

The LCD is touchscreen, below screen shows the overall information of the inverter.

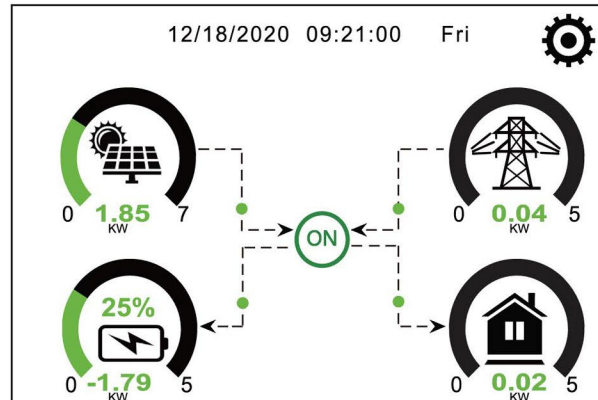

1.The icon in the center of the home screen indicates that the system is Normal operation.if it turns into "comm./FXX", it means the inverter has communication errors or other errors,the error message will display under this icon(FXX errors, detail error info can be viewed in the System Alarms menu).

2.At the top of the screen is the time.


3.System Setup Icon, Press this set button,you can enter into the system setup screen which including Basic Setup, Battery Setup, Grid Setup, System Work Mode, Generator port use,Advanced function and Li-Batt info.

4.The main screen showing the info including Solar, Grid, Load and Battery. Its also displaying the energy flow direction by arrow. When the power is approximate to high level, the color on the panels will changing from green to red so system info showing vividly on the main screen.

- PV power and Load power always keep positive.
- Grid power negative means sell to grid, positive means get from grid.
- Battery power negative means charge, positive means discharge.


LCD DISPLAY LCONS

LCD OPERATION FLOW CHART

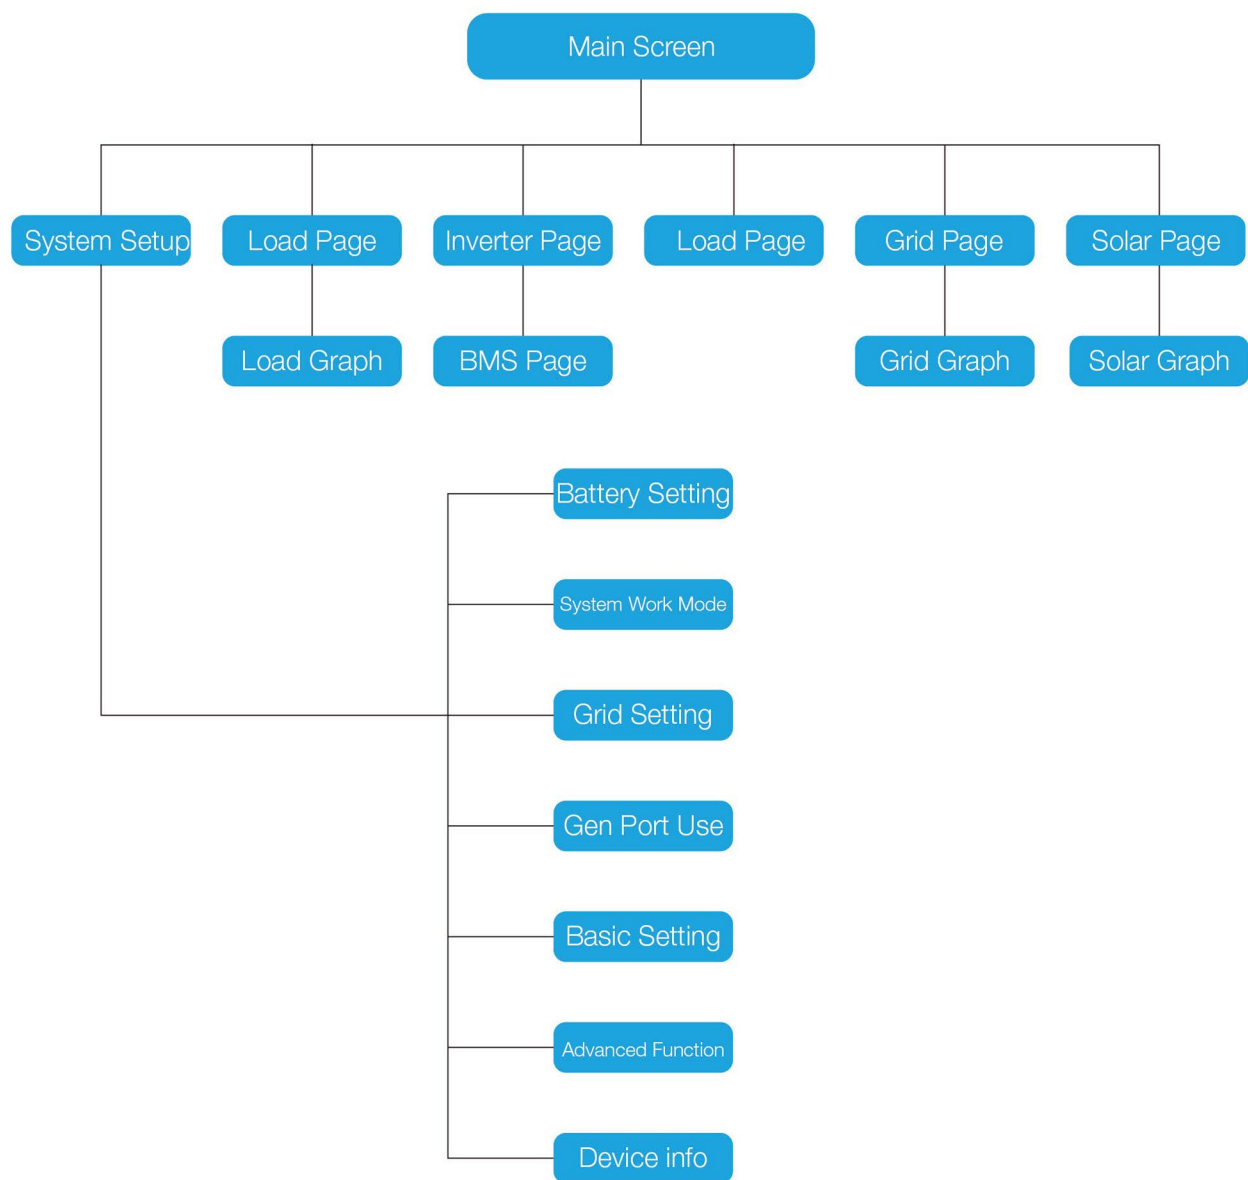

LCD DISPLAY LCONS

SOLAR POWER CURVE

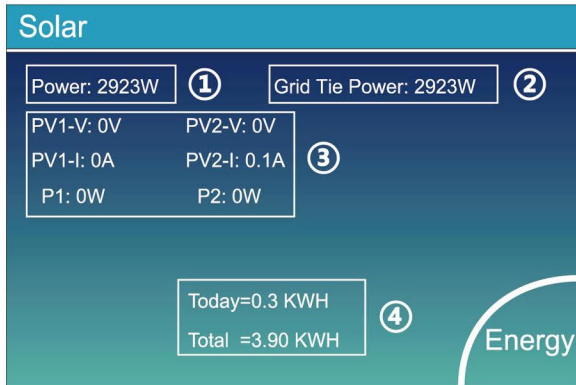


This is Solar Panel detail page.

- ① This is Solar Panel detail page.
- ② Grid Tie Power: when there's a string inverter AC couple at the grid or load side of hybrid inverter and there's a meter installed for the string inverter, then the hybrid inverter LCD will show the string inverter output power on its PV icon. Please make sure the meter can communicate with the hybrid inverter successfully.
- ③ Voltage, Current, Power for each MPPT.
- ④ Solar Panel energy for Day and Total. Press the "Energy" button will enter into the powercurve page.




This is Inverter detail page.

- ① Inverter Generation.
- ② 0.0Hz: frequency after DC/AC. Voltage, Current, Power for each Phase.
- ③ ***DC-T:** mean DC-DC temperature, **AC-T:** mean Heat-sink temperature. ***Note:** this part info is not available for some LCD FW.

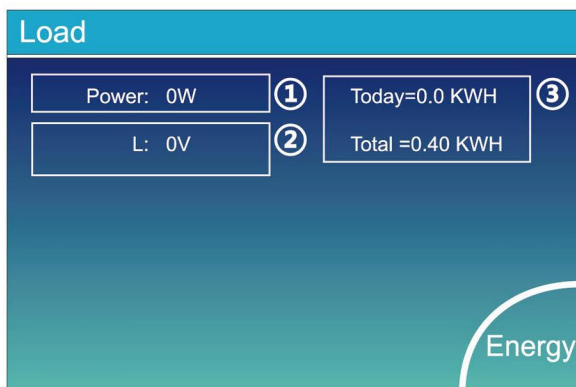

This is Load detail page.


- ① Load Power.
 - ② Voltage, Power for each Phase.
 - ③ Load consumption for Day and Total.
- When you check "Selling First" or "Zero export to Load" on system work mode page, the information on this page is about backup load which connect on Load port of hybrid inverter. When you check "Zero export to CT" on system work mode page, the information on this page is including backup load and home load. Press the "Energy" button will enter into the powercurve page.

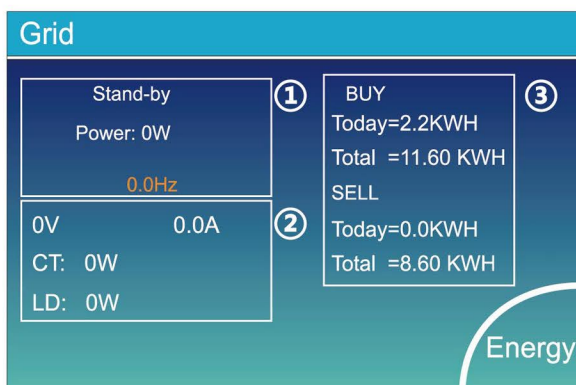


This is Grid detail page.

- ① Status, Power, Frequency.
 - ② **L:** Voltage for each Phase
CT: Power detected by the external current sensors
LD: Power detected using internal sensors on AC grid in/out breaker
 - ③ **BUY:** Energy from Grid to Inverter, **SELL:** Energy from Inverter to grid.
- Press the "Energy" button will enter into the power curve page.

LCD DISPLAY LCONS

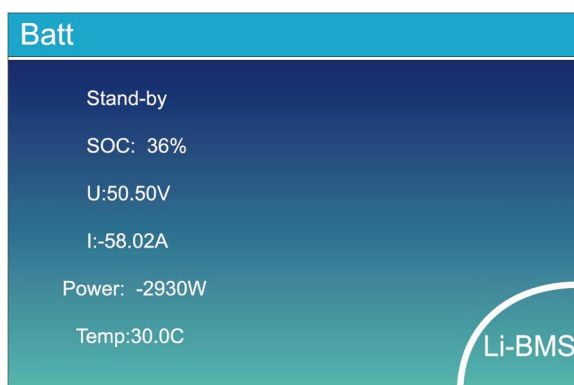





This is Battery detail page
if you use Lithium Battery, you can enter BMs
page

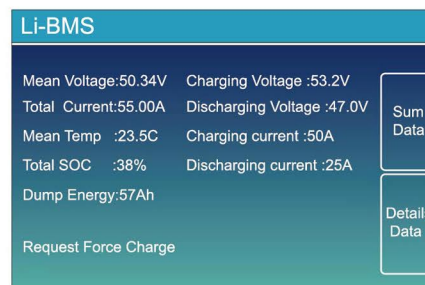

Request Force Charge: It indicates the BMS requests hybrid inverter to charge the battery actively.




CURVE PAGE-SOLAR & LOAD & GRID

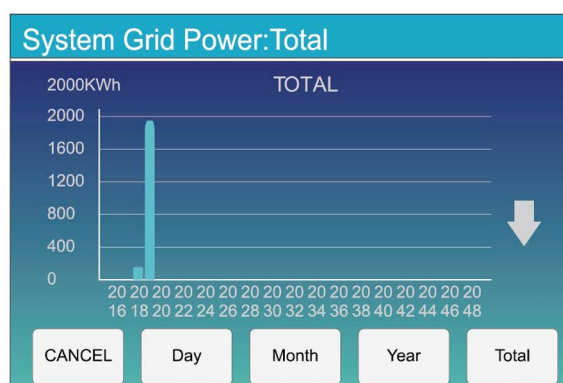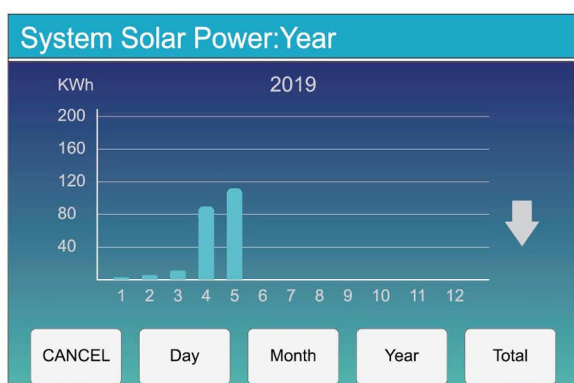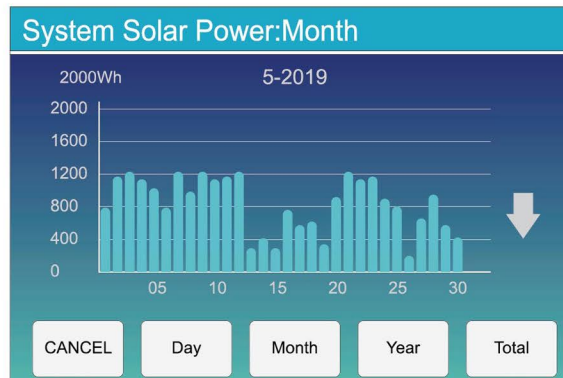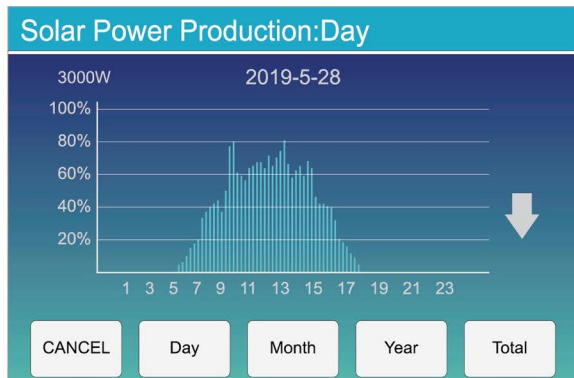

Solar power curve for daily, monthly, yearly and total can be roughly checked on the LCD, for more accuracy power generation, pls check on the monitoring system. Click the up and down arrow to check power curve of different period.


LCD DISPLAY LCONS

SYSTEM SETUP MENU

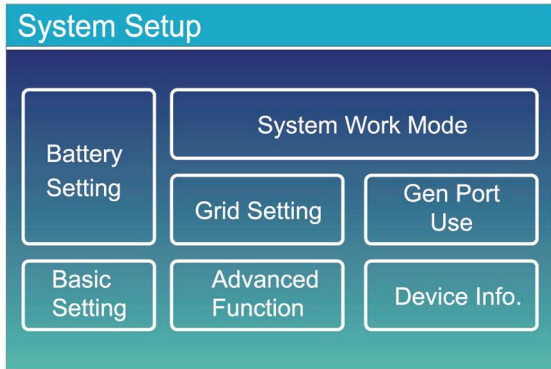


This is System Setup page.

BASIC SETUP MENU

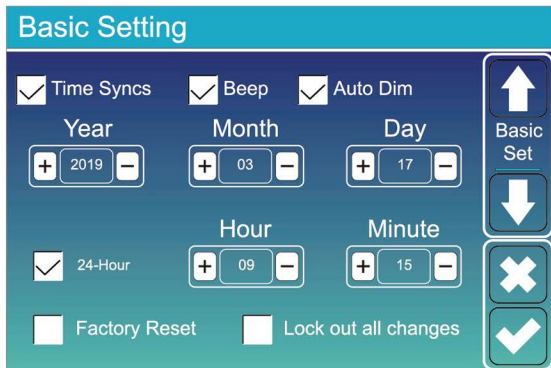

Factory Reset: Reset all parameters of the inverter.
Lock out all changes: Enable this menu for setting parameters that require locking and cannot be set up. Before performing a successful factory reset and locking the systems, to keep all changes you need to type in a password to enable the setting. The password for factory settings is 9999 and for lock out is 7777.

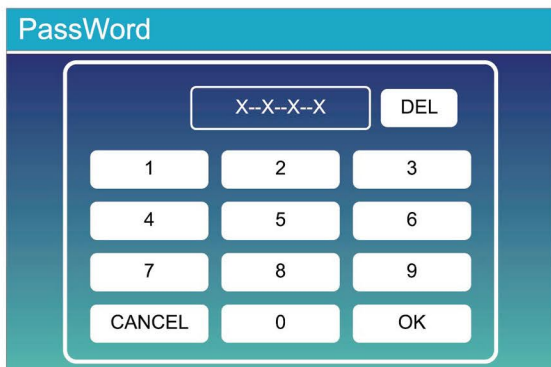

Factory Reset Password: 9999

Lock out all changes Password: 7777

System selfchek: After ticking this item it needs input the password. The default password is 1234

LCD DISPLAY LCONS

BATTERY SETUP MENU

Battery Setting

Batt Mode

☒ Lithium Batt Capacity 400Ah

☐ Use Batt V Max A Charge 40A

☐ Use Batt % Max A Discharge 40A

☐ No Batt

☐ Activate Battery ☐ Disable Float Charge

↑ Batt Mode

↓

✕

✓

Battery capacity: it tells Deye hybrid inverter to know your battery bank size.

Use Batt V: Use Battery Voltage for all the settings (V).

Use Batt %: Use Battery SOc for all the settings (%).

Max. A charge/discharge: Max battery charge/discharge current (0-70A for 3kW model, 0-90A for 3.6kW model, 0-120A for 5kW model, 0-135A for 6kW model). For AGM and Flooded, we recommend Ah battery size x 20% = Charge/Discharge amps.

. For Lithium, we recommend Ah battery size x 50% = Charge/Discharge amps.

. For Gel, follow manufacturer's instructions.

Active battery: This feature will help recover a battery that is over discharged by slowly charging from the solar array or grid.

Disable Float Charge: For the lithium battery with BMS communication, the inverter will keep the charging voltage at the current voltage when the BMS charging current requested is 0. It is used to help prevent battery from being overcharged.

Battery Setting

Start 30% 30% ②

A ① 40A 40A

☐ Gen Charge ☐ Grid Charge

☐ Gen Signal ☐ Grid Signal

☐ Gen Force ③

↑ Batt Set2

↓

✕

✓

This is Battery Setup page. ① ③

Start =30%: Percent S.O.C at 30% system will AutoStart a connected generator to charge the battery bank.

A= 40A: Charge rate of 40A from the attached generator in Amps.

Gen Charge: uses the gen input of the system to charge battery bank from an attached generator.

Gen Signal: Normally open relay that closes when the Gen Start signal state is active.

Gen Force: When the generator is connected, it is forced to start the generator without meeting other conditions.


This is Grid charge, you need select. ②

Start =30%: No use, Just for customization.

A= 40A: It indicates the Current that the Grid charges the Battery.

Grid Charge: It indicates that the grid charges the battery.

Grid Signal: Disable.

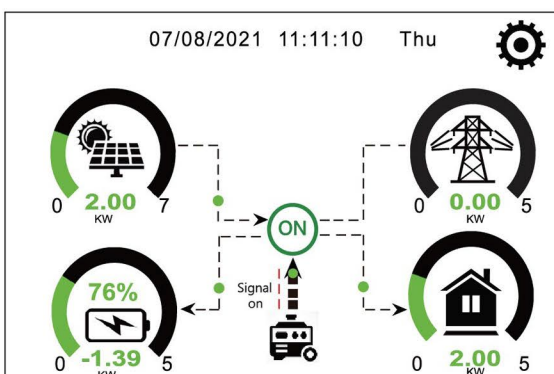

This page tells the PV and diesel generator power the load and battery

LCD DISPLAY LCONS

Generator

Power: 1392W

Today=0.0 KWH
Total =2.20 KWH

L1: 228V

Freq:50.0Hz

This page tells generator output voltage, frequency,power. And, how much energy is used from generator.

Battery Setting

Lithium Mode

00

Shutdown

10%

Low Batt

20%

Restart

40%

↑

Batt Set3

↓

✕

✓

Lithium Mode: This is BMS protocol.Please reference the document(Aproved Battery).

Shutdown 10%: It indicates the inverter will shutdown if the soc below this value.

Low Batt 20%: It indicates the inverter will alarm if the SOC below this value.

Restart 40%: Battery voltage at 40% AC output will resume.

Battery Setting

Float V ①

53.6V

Absorption V

57.6V

Equalization V

57.6V

Equalization Days

30 days

Equalization Hours

3.0 hours

Shutdown ③

20%

Low Batt

35%

Restart

50%

TEMPCO(mV/C/Cell)

②

-5

Batt Resistance

25mOhms

↑

Batt Set3

↓

✕

✓

There are 3 stages of charging the Battery

This is for professional installers, you can keep it if you do not know.

Shutdown 20%: The inverter will shutdown if the SOC below this value.

Low Batt 35%: The inverter will alarm if the SOC below this value.

Restart 50%: Battery SOC at 50% AC output will resume.

Recommended battery settings

Battery Type	Absorption Stage	Float Stage	Torque value (every 30 days 3hr)
AGM (or PCC)	14.2V(57.6V)	13.4V(53.6V)	14.2V(57.6V)
Gel	14.1V(56.4V)	13.5V(54.0V)	
Wet	14.7V(59.0V)	13.7V(55.0V)	14.7V(59.0V)
Lithium	Follow its BMS voltage parameters		

LCD DISPLAY LCONS

SYSTEM WORK MODE SETUP MENU

System Work Mode

☐

Selling First

Max Solar Power

↑

☒

Zero Export To Load

☒ Solar Sell

↓

☐

Zero Export To CT

☒ Solar Sell

✕

Max Sell Power

Zero-export Power

Energy pattern

☒ BattFirst

☐ LoadFirst

☒ Grid Peak Shaving

5000

Power

✓


Work Mode

Selling First: This Mode allows hybrid inverter to sell back any excess power produced by the solar panels to the grid. If time of use is active, the battery energy also can be sold into grid.


The PV energy will be used to power the load and charge the battery and then excess energy will flow to grid. Power source priority for the load is as follows:

1. Solar Panels.
2. Grid.
3. Batteries (until programmable % discharge is reached).

Zero Export To Load: Hybrid inverter will only provide power to the backup load connected. The hybrid inverter will neither provide power to the home load nor sell power to grid. The built-in CT will detect power flowing back to the grid and will reduce the power of the inverter only to supply the local load and charge the battery.

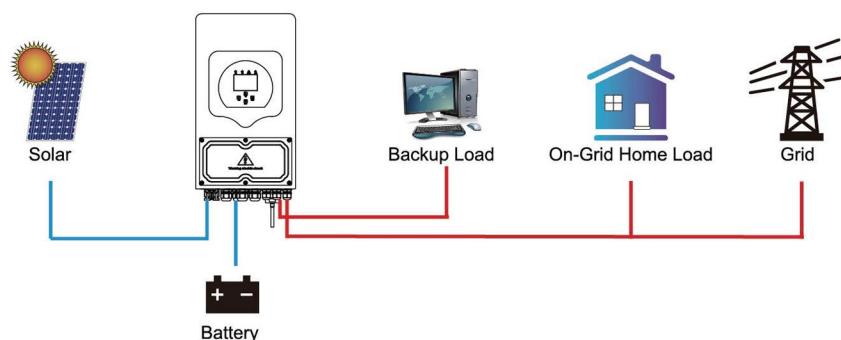

Zero Export To CT: Hybrid inverter will not only provide power to the backup load connected but also give power to the home load connected. If PV power and battery power is insufficient, it will take grid energy as supplement. The hybrid inverter will not sell power to grid. In this mode, a CT is needed. The installation method of the CT please refer to chapter 3.6 CT Connection. The external CT will detect power flowing back to the grid and will reduce the power of the inverter only to supply the local load, charge battery and home load.

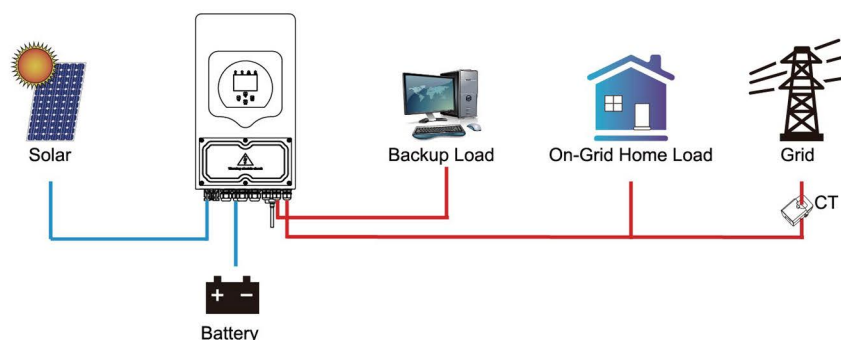

LCD DISPLAY LCONS

Solar Sell: "Solar sell" is for Zero export to load or Zero export to CT: when this item is active, the surplus energy can be sold back to grid. When it is active, PV Power source priority usage is as follows: load consumption and charge battery and feed into grid.

Max, sell power: Allowed the maximum output power to flow to grid.

Zero-export Power: for zero-export mode, it tells the grid output power. Recommend to set it as 20-100W to ensure the hybrid inverter won't feed power to grid.

Energy Pattern: PV Power source priority

Batt First: pV power is firstly used to charge the battery and then used to power the load. If pV power is insufficient, grid will make supplement for battery and load simultaneously.

Load First: PV power is firstly used to power the load and then used to charge the battery. If PV power is insufficient, grid will make supplement for battery and load simultaneously.

Max Solar Power: allowed the maximum DC input power

Grid Peak-shaving: when it is active, grid output power will be limited within the set value. If the load power exceeds the allowed value, it will take PV energy and battery as supplement. If still can't meet the load requirement, grid power will increase to meet the load needs.

System Work Mode

Grid Charge	Gen	Time	Power	Batt
<input type="checkbox"/>	<input type="checkbox"/>	01:00	5:00	5000 49.0V
<input type="checkbox"/>	<input type="checkbox"/>	05:00	9:00	5000 50.2V
<input checked="" type="checkbox"/>	<input type="checkbox"/>	09:00	13:00	5000 50.9V
<input checked="" type="checkbox"/>	<input type="checkbox"/>	13:00	17:00	5000 51.4V
<input checked="" type="checkbox"/>	<input type="checkbox"/>	17:00	21:00	5000 47.1V
<input checked="" type="checkbox"/>	<input type="checkbox"/>	21:00	01:00	5000 49.0V

☒ Time Of Use
☐ Work Mode2
☐ ☒

Time of use: it is used to program when to use grid or generator to charge the battery, and when to discharge the battery to power the load. Only tick "Time Of Use" then the follow items (Grid, charge, time, power etc.) will take effect.

Note: when in selling first mode and click time of use, the battery power can be sold into grid.

Grid charge: utilize grid to charge the battery in a time period.

Gen charge: utilize diesel generator to charge the battery in a time period.

Time: real time, range of 01:00-24:00.

Batt(V or SOC %): battery SOC% or voltage at when the action is to happen.

System Work Mode

Grid Charge	Gen	Time	Power	Batt
<input checked="" type="checkbox"/>	<input type="checkbox"/>	01:00	5:00	5000 80%
<input type="checkbox"/>	<input type="checkbox"/>	05:00	8:00	5000 40%
<input type="checkbox"/>	<input type="checkbox"/>	08:00	10:00	5000 40%
<input type="checkbox"/>	<input type="checkbox"/>	10:00	15:00	5000 80%
<input type="checkbox"/>	<input type="checkbox"/>	15:00	18:00	5000 40%
<input type="checkbox"/>	<input type="checkbox"/>	18:00	01:00	5000 35%

☒ Time Of Use
☐ Work Mode2
☐ ☒

For example:

During 01:00-05:00, when battery SOC is lower than 80%, it will use grid to charge the battery until battery SOC reaches 80%.

During 05:00-08:00 and 08:00-10:00, when battery SOC is higher than 40%, hybrid inverter will discharge the battery until the SOC reaches 40%.

During 10:00-15:00, when battery SOC is higher than 80%, hybrid inverter will discharge the battery until the SOC reaches 80%.

During 15:00-18:00, when battery SOC is higher than 40%, hybrid inverter will discharge the battery until the SOC reaches 40%.

During 18:00-01:00, when battery SOC is higher than 35%, hybrid inverter will discharge the battery until the SOC reaches 35%.

System Work Mode

Mon	Tue	Wed	Thu	Fri	Sat	Sun
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

☐ Work Mode4
☒ ☐

It allows users to choose which day to execute the setting of "Time of Use".

For example, the inverter will execute the time of use page on Mon/Tue/Wed/Thu/Fri/Sat only.

LCD DISPLAY LCONS

GRID SETUP MENU

Grid Setting

☐ Unlock Grid Setting

Grid Mode

General Standard

0/16

Grid Frequency

☒ 50HZ
 ☐ 60HZ

INV Output Voltage

240V

220V

230V

200V

Grid Type

☒ Single Phase
 ☐ 120/240V Split Phase
 ☐ 120/208V 3 Phase

↑

↓

✕

✓

Grid Set1

Unlock Grid Setting: before changing the grid parameters, please enable this with password of 7777. Then it is allowed to change the grid parameters.

Grid Mode: General Standard、UL1741&IEEE1547、CPUC RULE21、SRD-UL-1741、CEI 0-21、EN50549_Cz、Australia_A、Australia_B、Australia_C、NewZealand、VDE4105、OVE_Directive_R25、EN50549_CZ_PPDS_L16A、NRSO97、G98/G99、G98/G99_NI、ESB Networks(Ireland).

Please follow the local grid code and then choose the corresponding grid standard.

Grid Setting/Connect

Normal connect

Normal Ramp rate

60s

Low frequency

48.00Hz

High frequency

51.50Hz

Low voltage

185.0V

High voltage

265.0V

Reconnect after trip

Reconnect Ramp rate

60s

Low frequency

48.20Hz

High frequency

51.30Hz

Low voltage

187.0V

High voltage

263.0V

Reconnection Time

60s

PF

1.000

↑

↓

✕

✓

Grid Set2

Normal connect: The allowed grid voltage/frequency range when the inverter first time connect to the grid.

Normal Ramp rate: It is the startup power ramp.

Reconnect after trip: The allowed grid voltage /frequency range for the inverter connects the grid after the inverter trip from the grid.

Reconnect Ramp rate: It is the reconnection power ramp.

Reconnection time: The waiting time period for the inverter connects the grid again.

PF: Power factor which is used to adjust inverter reactive power.

Grid Setting/IP Protection

Over voltage U>(10 min. running mean)

260.0V

①

HV3

265.0V

HV2

265.0V

0.10s

HV1

265.0V

0.10s

LV1

185.0V

0.10s

LV2

185.0V

0.10s

LV3

185.0V

HF3

51.50Hz

HF2

51.50Hz

0.10s

HF1

51.50Hz

0.10s

LF1

48.00Hz

0.10s

LF2

48.00Hz

0.10s

LF3

48.00Hz

②

0.10s-Trip time.

↑

↓

✕

✓

Grid Set3

① HV1: Level 1 overvoltage protection point;
HV2: Level 2 overvoltage protection point;
HV3: Level 3 overvoltage protection point.
LV1: Level 1 undervoltage protection point;
LV2: Level 2 undervoltage protection point;
LV3: Level 3 undervoltage protection point.
HF1: Level 1 over frequency protection point;
HF2: Level 2 over frequency protection point;
HF3: Level 3 over frequency protection point.
LF1: Level 1 under frequency protection point;
LF2: Level 2 under frequency protection point;
LF3: Level 3 under frequency protection point.

Grid Setting/F(W)

☐ F(W)

Over frequency

Drop f

40%PE/Hz

Start freq f

50.20Hz

Stop freq f

50.20Hz

Start delay f

0.00s

Stop delay f

0.00s

Under frequency

Drop f

40%PE/Hz

Start freq f

49.80Hz

Stop freq f

49.80Hz

Start delay f

0.00s

Stop delay f

0.00s

↑

↓

✕

✓

Grid Set4

FW: this series inverter is able to adjust inverter output power according to grid frequency.

Drop f: percentage of nominal power per Hz
For example, "Start freq f > 50.2Hz, Stop freq f < 50.2Hz, Drop f = 40%PE/Hz" when the grid frequency reaches 50.2Hz, the inverter will decrease its active power at Drop f of 40%. And then when grid system frequency is less than 50.2Hz, the inverter will stop decreasing output power.

For the detailed setup values, please follow the local grid code.

LCD DISPLAY LCONS

Grid Setting/V(W) V(Q)

☐ V(W) ☐ V(Q)

	V1	P1	V2	P2	V3	P3	V4	P4
V(W)	109.0%	100%	110.0%	20%	111.0%	20%	111.0%	20%
V(Q)	90.0%	44%	95.7%	0%	104.3%	0%	112.2%	-60%

Lock-in/Pn 5% Lock-out/Pn 20%

Grid Set5

V(W): It is used to adjust the inverter active power according to the set grid voltage.

V(Q): It is used to adjust the inverter reactive power according to the set grid voltage. This function is used to adjust inverter output power(active power and reactive power) when grid voltage changes.

Lock-in/Pn 5%: When the inverter active power is less than 5% rated power, the vQ mode will not take effect.

Lock-out/Pn 20%: If the inverter active power is increasing from 5% to 20% rated power, the vQ mode will take effect again.

For example: V2=110%, P2=20%. When the grid voltage reaches the 110% times of rated grid voltage, inverter output power will reduce its active output power to 20% rated power.

For example: V1=90%, Q1=44%. When the grid voltage reaches the 90% times of rated grid voltage, inverter output power will output 44% reactive output power.

For the detailed setup values, please follow the local grid code.

Grid Setting/P(Q) P(F)

☐ P(Q) ☐ P(PF)

	P1	Q1	P2	Q2	P3	Q3	P4	Q4
P(Q)	0%	0%	0%	0%	0%	0%	0%	0%
P(PF)	50%	-2.400	50%	0.000	50%	0.000	50%	6.000

Lock-in/Pn 50% Lock-out/Pn 50%

Grid Set6

P(Q): It is used to adjust the inverter reactive power according to the set active power.

P(PF): It is used to adjust the inverter PF according to the set active power. For the detailed setup values, please follow the local grid code.

Lock-in/Pn 50%: When the inverter output active power is less than 50% rated power, it won't enter the P(PF) mode.

Lock-out/Pn 50%: When the inverter output active power is higher than 50% rated power, it will enter the P(PF) mode. Note: only when the grid voltage is equal to or higher than 1.05 times of rated grid voltage, then the P(PF) mode will take effect.

Grid Setting/LVRT

☐ L/HVR

	HV1	LV1
L/HVR	115%	50%

Grid Set7

Reserved: This function is reserved. It is not recommended.

THE METHOD OF CEI-021 STANDARD SELF-CHECK

Grid Setting

☐ Unlock Grid Setting

Grid Mode **CEI 0-21** 4/16

Grid Frequency ☒ 50Hz ☐ 60Hz

INV Output Voltage **240V**
220V
230V
200V

Grid Type ☒ Single Phase
☐ 120/240V Split Phase
☐ 120/208V 3 Phase

Grid Set1

Firstly, tick the "CEI-021" and "Single phase/50Hz" on the grid setting menu.

LCD DISPLAY LCONS

Grid Warning

Grid Mode: CEI 0-21

Grid Type: 50Hz
220V Single Phase

CANCEL OK

Advanced Function

☐ Solar Arc Fault ON Backup Delay 0ms

☐ Clear Arc_Fault

☒ System selfcheck ☐ Gen peak-shaving

☐ DRM CT Ratio 2000: 1

☐ Signal ISLAND MODE

☐ BMS_Err_Stop ☐ CEI 0-21 Report

Func Set1

Secondly, tick "System selfcheck", then it will ask you input the password, and the default password is 1234.

Note: please don't tick "CEI-021 Report".

This "System selfcheck" program is valid only after choosing grid type as "CEI-021".

PassWord

X--X--X--X DEL

1 2 3

4 5 6

7 8 9

CANCEL 0 OK

The default password is 1234
After input the password and then tick "OK"

Inverter ID : 2012041234

Self-Test OK 8/8

Testing 59.S1...	Test 59.S1 OK!
Testing 59.S2...	Test 59.S2 OK!
Testing 27.S1...	Test 27.S1 OK!
Testing 27.S2...	Test 27.S2 OK!
Testing 81>S1...	Test 81>S1 OK!
Testing 81>S2...	Test 81>S2 OK!
Testing 81<S1...	Test 81<S1 OK!
Testing 81<S2...	Test 81<S2 OK!

During the self-test process, all the indicators will be on and the alarm keeps on.
When all the test items shows OK, which means the self-test is completed successfully.

LCD DISPLAY LCONS

Advanced Function

<input type="checkbox"/> Solar Arc Fault ON	Backup Delay	<input type="button" value="↑"/> Func Set1 <input type="button" value="↓"/> <input type="button" value="✕"/> <input type="button" value="✓"/>
<input type="checkbox"/> Clear Arc_Fault	0ms	
<input checked="" type="checkbox"/> System selfcheck	<input type="checkbox"/> Gen peak-shaving	
<input type="checkbox"/> DRM	CT Ratio	
<input type="checkbox"/> Signal ISLAND MODE	2000: 1	
<input type="checkbox"/> BMS_Err_Stop	<input checked="" type="checkbox"/> CEI 0-21 Report	

then press "esc" button to quit from this page.
Tick "system selfcheck" on the Advanced function menu and tick "CEI-021 Report".

PassWord

X--X--X--X

DEL

1	2	3
4	5	6
7	8	9
CANCEL	0	OK

then press "esc" button to quit from this page.
Tick "system selfcheck" on the Advanced function menu and tick "CEI-021 Report".

Inverter ID : 2012041234		
Self-Test Report		
59.S1 threshold	253V 900ms	59.S1: 228V
59.S2 threshold	264.5V 200ms	59.S2: 229V
27.S1 threshold	195.5V 1500ms	27.S1: 228V
27.S2 threshold	34.5V 200ms	27.S2: 227V
81>.S1 threshold	50.2Hz 100ms	
81>.S2 threshold	51.5Hz 100ms	
81<.S1 threshold	49.8Hz 100ms	
81<.S2 threshold	47.5Hz 100ms	

This page will shows the test result of "CEI-021 self-check".

GENERATOR PORT USE SETUP MENU

GEN PORT USE

Mode <input checked="" type="radio"/> Generator Input Rated Power 8000W <input type="radio"/> SmartLoad Output Power 500W <input type="radio"/> Micro Inv Input ON 100% OFF 95%	<input type="checkbox"/> AC couple on grid side <input type="checkbox"/> AC couple on load side <input type="checkbox"/> GEN connect to Grid input <input type="checkbox"/> On Grid always on AC Couple Fre High 52.00Hz	<input type="button" value="↑"/> PORT <input type="button" value="↓"/> <input type="button" value="✕"/> <input type="button" value="✓"/>
--	---	--

Generator input rated power: allowed Max.power from diesel generator.

GEN connect to grid input: connect the diesel generator to the grid input port.

Smart Load Output: This mode utilizes the Gen input connection as an output which only receives power when the battery Soc and PV power is above a user programmable threshold.

e.g. Power=500W, ON: 100%, OFF=95%: When the PV power exceeds 500W, and battery bank SOC reaches 100%, Smart Load Port will switch on automatically and power the load connected. When the battery bank Soc < 95% or PV power < 500w, the Smart Load Port will switch off automatically.

LCD DISPLAY LCONS

Smart Load OFF Batt

— Battery SOC at which the Smart load will switch off.

Smart Load ON Batt

— Battery SOC at which the Smart load will switch on. Also, the PV input power should exceed the setting value (Power), simultaneously, and then the Smart load will switch on...

On Grid always on: When click "on Grid always on" the smart load will switch on when the grid is present.

Micro Inv Input: To use the Generator input port as a micro-inverter on grid inverter input (AC coupled), this feature will also work with "Grid-Tied" inverters.

***Micro Inv Input OFF:** when the battery SOC exceeds setting value, Microinverter or grid-tied inverter will shut down.

***Micro Inv Input ON:** when the battery SOC is lower than setting value, Microinverter or grid-tied inverter will start to work.

AC Couple Fre High: If choosing "Micro Inv input", as the battery SOC reaches gradually setting value (OFF), During the process, the microinverter output power will decrease linear. When the battery SOC equals to the setting value (OFF), the system frequency will become the setting value (AC couple Fre high) and the Microinverter will stop working. Stop exporting power produced by the microinverter to the grid.



***Note:** Micro Inv Input OFF and On is valid for some certain FW version only.

***AC couple on load side:** connecting the output of on-grid inverter at the load port of the hybrid inverter. In this situation, the hybrid inverter will not be able to show the load power correctly.

***AC couple on grid side:** this function is reserved.

***Note:** Some firmware versions don't have this function.

ADVANCED FUNCTION SETUP MENU

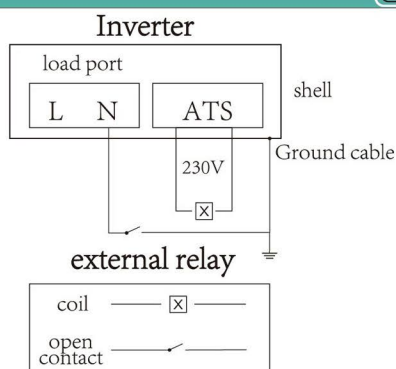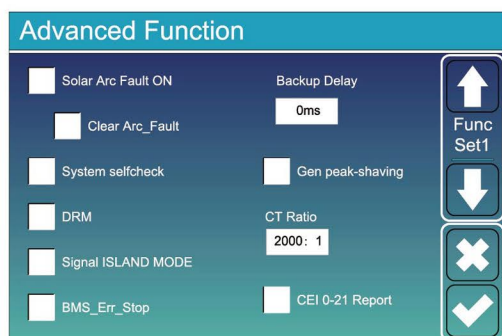

Solar Arc Fault ON: This is only for US.

System selfcheck: Disable. this is only for factory.

Gen Peak-shaving: Enable When the power of the generator exceeds the rated value of it, the inverter will provide the redundant part to ensure that the generator will not overload.

DRM: For AS4777 standard.

Backup Delay: When the grid cuts off, the inverter will give output power after the setting time.


For example, backup delay: 3ms. the inverter will give output power after 3ms when the grid cuts off.

Note: for some old FW version, the function is notiable.


BMS_Err_Stop: When it is active, if the battery BMS failed to communicate with inverter, the inverter will stop working and report fault.

Signal ISLAND MODE: when "signal island mode" is checked and the inverter connects the grid, the ATS port voltage will be 0. When "signal island mode" is checked and the inverter disconnected from the grid, the ATS port voltage will output 230Vac voltage. With this feature and outside NO type relay, it can realize N and PE disconnection or bond.

More details, please refer to left side picture.

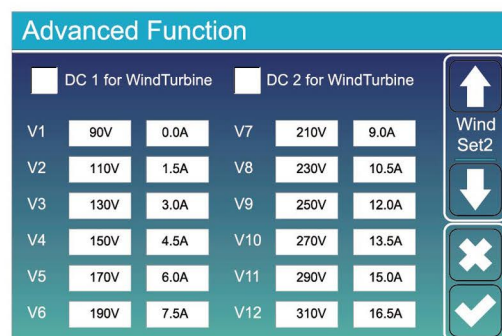

This is for Wind Turbine

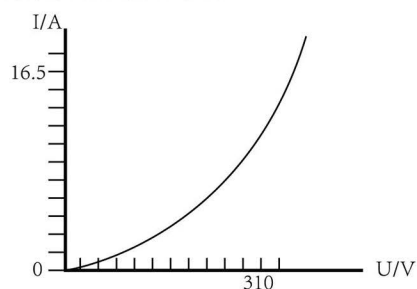

LCD DISPLAY LCONS

Advanced Function

☐ Parallel
☒ Master
☒ Slave

Modbus SN: 00

☒ A Phase
☐ B Phase
☐ C Phase

☐ Ex_Meter For CT
☐ A Phase
☐ B Phase
☐ C Phase



Meter Select: CHNT-3P 0/4
 CHNT-1P
 Easton-3P
 Easton-1P
☐ Grid Side INV Meter2

↑ Par. Set3
 ↓
 ✕
 ✓

Ex_Meter For CT: when in Three phase system with CHNT Three phase energy meter (DTSU666), click corresponding phase where hybrid inverter is connected.e.g. when the hybrid inverter output connects to A phase, please click A Phase.

Meter Select: select the corresponding meter type according to the meter installed in the system.

Grid Side INV Meter2: when there's a string inverter AC couple at the grid or load side of hybrid inverter and there's a meter installed for the string inverter, then the hybrid inverter LCD will show the string inverter outputpower on its PV icon. Please make sure the meter can communicate with the hybrid inverter successfully.

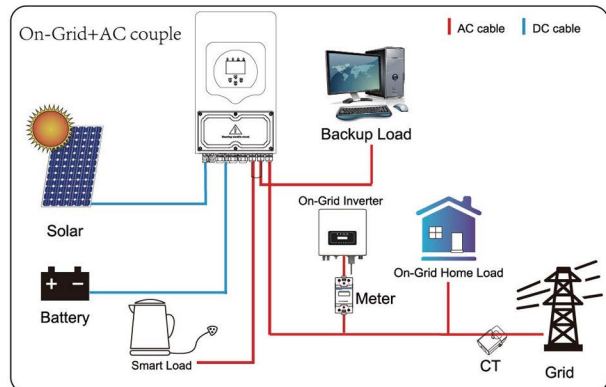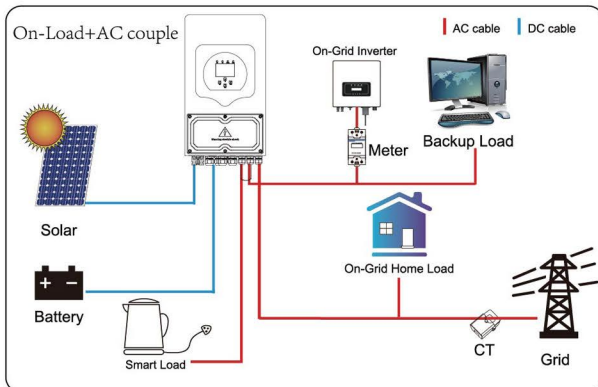

Advanced Function

☐ ATS ☒ ON

↑ Func Set4
 ↓
 ✕
 ✓

ATS: It is related with ATS port voltage. it is better in "uncheck" position.

DEVICE INFO SETUP MENU

Device Info.

Inverter ID: 16010
 HMI: Ver0302
 Temp: 30.0
 SOC: 100%
 MAIN: V
 1charge: 0-5213-0717
 Flash: 0-5213-0717

Alarms Code Occurred
 F64 Heatsink_HighTemp_Fault 2019-03-11 15:56
 F64 Heatsink_HighTemp_Fault 2019-03-08 10:46
 F64 Heatsink_HighTemp_Fault 2019-03-08 10:45

↑ e
 ↓
 ✕
 ✓

This page show Inverter ID, Inverter version and alarmcodes.


HMI: LCD version

MAIN: Control board FW version


MODE

MODE


MODE L: BASIC

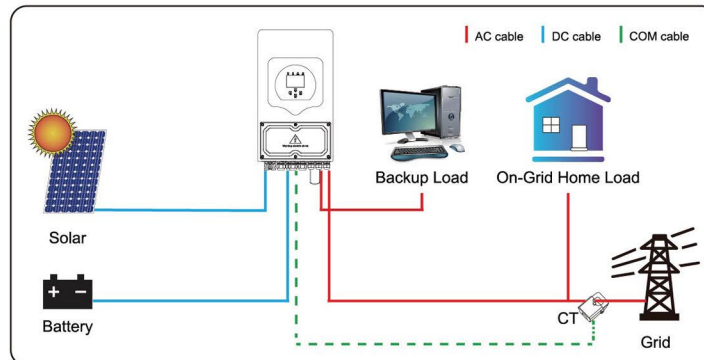


MODE LL: WITH GENERATOR

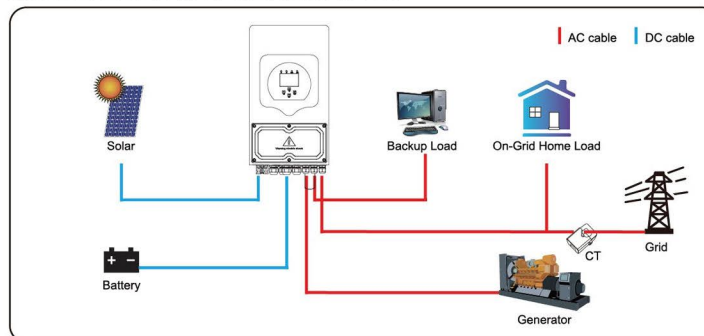


MODE LLL: WITH SMART-LOAD

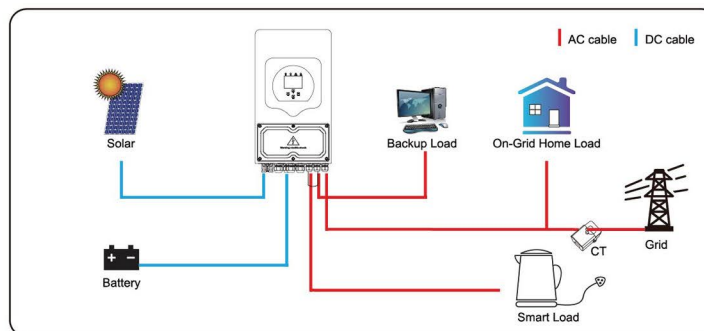

MODE IV: AC COUPLE

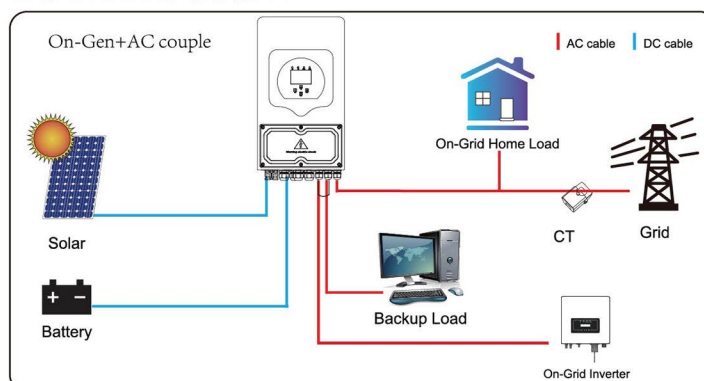

MODE

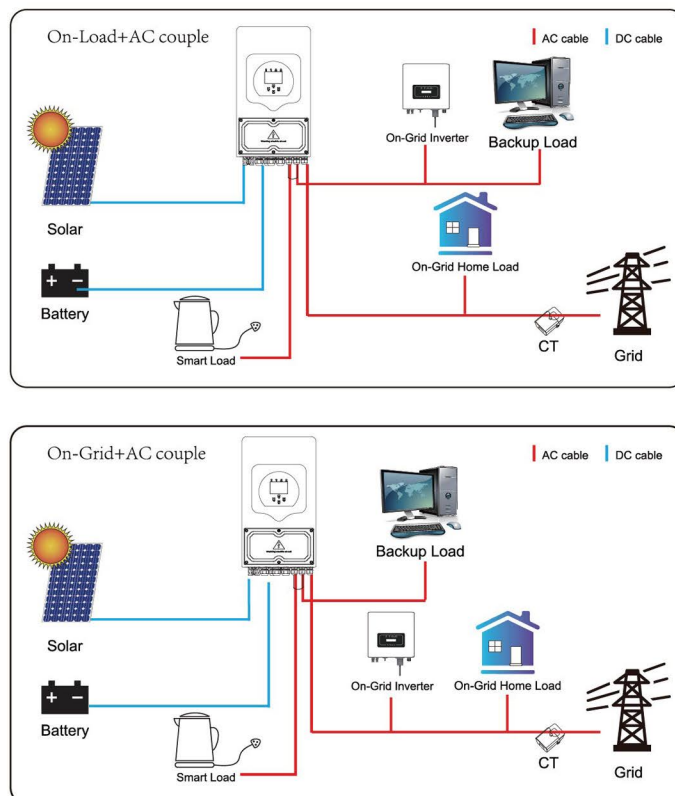

The 1st priority power of the system is always the PV power, then 2nd and 3rd priority power will be the battery bank or grid according to the settings. The last power backup will be the Generator if it is available.

FAULT INFORMATION AND PROCESSING

The energy storage inverter is designed according to the grid-connected operation standard and meets the safety requirements and electromagnetic compatibility requirements. Before leaving the factory, the inverter undergoes several rigorous tests to ensure that the inverter can operate reliably.



If any of the fault messages listed in Table 7-1 appear on your inverter and the fault has not been removed after restarting, please contact your local dealer or service center. You need to have the following information ready.

- Inverter serial number;
- Distributor or service center of the inverter ;
- On-grid power generation date;
- The problem description (including the fault code and indicator status displayed on the LCD) is as detailed as possible.
- Your contact information. In order to give you a clearer understanding of the inverter's fault information, we will list all possible fault codes and their descriptions when the inverter is not working properly.

FAULT INFORMATION AND PROCESSING

Error code	Description	Solutions
FO8	GFDI_Relay_Failure	<ol style="list-style-type: none"> 1. When inverter is in Split phase(120/240Vac) or three-phase system (120/208Vac) system, the backup load port N line needs to connect ground; 2. If the fault still exists, please contact us for help.
F13	Working mode change	<ol style="list-style-type: none"> 1. When the grid type and frequency changed it will report F13; 2. When the battery mode was changed to "No battery" mode, it will report F13; 3. For some old FW version, it will report F13 when the system work mode changed; 4. Generally, it will disappear automatically when shows F13; 5. If still same, and turn off the DC switch and AC switch and wait for one minute and then turn on the DC/AC switch; 6. Seek help from us, if can not go back to normal state.
F18	AC over current fault of hardware	<p>AC side over current fault</p> <ol style="list-style-type: none"> 1. Please check whether the backup load power and common load power are within the range; 2. Restart and check whether it is in normal; 3. Seek help from us, if can not go back to normal state.
F20	DC over current fault of the hardware	<p>DC side over current fault</p> <ol style="list-style-type: none"> 1. Check PV module connect and battery connect; 2. When in the off-grid mode, the inverter startup with big power load, it may report F20. Please reduce the load power connected; 3. Turn off the DC switch and AC switch and then wait one minute, then turn on the DC/AC switch again; 4. Seek help from us, if can not go back to normal state.
F22	Tz_EmergStop_Fault	Please contact your installer for help.
F23	AC leakage current is transient over current	<p>Leakage current fault</p> <ol style="list-style-type: none"> 1. Check PV side cable ground connection. 2. Restart the system 2~3 times. 3. If the fault still exists, please contact us for help.
F24	DC insulation impedance failure	<p>PV isolation resistance is too low</p> <ol style="list-style-type: none"> 1. Check the connection of PV panels and inverter is firmly and correctly; 2. Check whether the PE cable of inverter is connected to ground;
F26	The DC busbar is unbalanced	<ol style="list-style-type: none"> 1. Please wait for a while and check whether it is normal; 2. When the hybrid in split phase mode, and the load of L1 and load of L2 is big different, it will report the F26. 3. Restart the system 2~3 times 4. Seek help from us, if can not go back to normal state.
F29	Parallel CANBus fault	<ol style="list-style-type: none"> 1. When in parallel mode, check the parallel communication cable connection and hybrid inverter communication address setting; 2. During the parallel system startup period, inverters will report F29. when all inverters are in ON status, it will disappear automatically; 3. If the fault still exists, please contact us for help.

FAULT INFORMATION AND PROCESSING

Error code	Description	Solutions
F34	AC Overcurrent fault	1.Check the backup load connected, make sure it is in allowed power range; 2.If the fault still exists, please contact us for help.
F35	No AC grid	No Utility 1. Please confirm grid is lost or not; 2. Check the grid connection is good or not; 3. Check the switch between inverter and grid is on or not; 4. Seek help from us, if can not go back to normal state.
F41	Parallel system stop	1.Check the hybrid inverter working status.If there's 1 pcs hybrid inverter is in OFF status, the other hybrid inverters may report F41 fault in parallel system. 2.If the fault still exists, please contact us for help.
F42	AC line low voltage	Grid voltage fault 1.Check the AC voltage is in the range of standard voltage in specification; 2.Check whether grid AC cables are firmly and correctly connected; 3.Seek help from us, if can not go back to normal state.
F47	AC over frequency	Grid frequency out of range 1. Check the frequency is in the range of specification or not; 2. Check whether AC cables are firmly and correctly connected; 3. Seek help from us, if can not go back to normal state.
F48	AC lower frequency	Grid frequency out of range 1. Check the frequency is in the range of specification or not; 2. Check whether AC cables are firmly and correctly connected; 3. Seek help from us, if can not go back to normal state.
F56	DC busbar voltage is too low	Battery voltage low 1. Check whether battery voltage is too low; 2. If the battery voltage is too low, using PV or grid to charge the battery; 3. Seek help from us, if can not go back to normal state.
F58	BMS communication fault	1. it tells the communication between hybrid inverter and battery BMS disconnected when "BMS Err-Stop" is active; 2. if don't want to see this happen, you can disable "BMS Err-Stop" item on the LCD; 3. If the fault still exists, please contact us for help.
F63	ARC fault	1. ARC fault detection is only for US market; 2. Check PV module cable connection and clear the fault; 3. Seek help from us, if can not go back to normal state.
F64	Heat sink high temperature failure	Heat sink temperature is too high 1. Check whether the work environment temperature is too high; 2. Turn off the inverter for 10mins and restart; 3. Seek help from us, if can not go back to normal state.

FAULT INFORMATION AND PROCESSING

Under the guidance of our company, customers return our products so that our company can provide service of maintenance or replacement of products of the same value. Customers need to pay the necessary freight and other related costs. Any replacement or repair of the product will cover the remaining warranty period of the product. If any part of the product or product is replaced by the company itself during the warranty period, all rights and interests of the replacement product or component belong to the company.

Factory warranty does not include damage due to the following reasons:

- Damage during transportation of equipment;
- Damage caused by incorrect installation or commissioning;
- Damage caused by failure to comply with operation instructions, installation instructions or maintenance instructions;
- Damage caused by attempts to modify, alter or repair products;
- Damage caused by incorrect use or operation ;
- Damage caused by insufficient ventilation of equipment;
- Damage caused by failure to comply with applicable safety standards or regulations;
- Damage caused by natural disasters or force majeure (e.g, floods, lightning, overvoltage, storms, fires, etc.

In addition, normal wear or any other failure will not affect the basic operation of the product Any external scratches, stains or natural mechanical wear does not represent a defect in the product.

LIMITATION OF LIABILITY

In addition to the product warranty described above, the state and local laws and regulations provide financial compensation for the product's power connection (including violation of implied terms and warranties). The company hereby declares that the terms and conditions of the product and the policy cannot and can only legally exclude all liability within a limited scope.

FAULT INFORMATION AND PROCESSING

DATASHEET

Model	LHS-LV-3.6K F1	LHS-LV-5K F1	LHS-LV-6K F1
Battery Input Data			
Battery Type	Lead-acid or Lithium-ion		
Battery Voltage Range(V)	40-60		
Max. Charging Current(A)	90	120	135
Max. Discharging Current(A)	90	120	135
Charging Strategy for Li-Ion Battery	Self-adaption to BMS		
Number of Battery Input	1		
PV String Input Data			
Max. PV Input Power(W)	4680	6500	7800
Max. PV Input Voltage(V)	500		
Start-up Voltage(V)	125		
PV Input Voltage Range(V)	125-500		
MPPT Voltage Range(V)	150-425		
Full Load MPPT Voltage Range(V)	300-425		
Rated pV Input Voltage(V)	370		
Max. Operating PV Input Current(A)	13+13		
Max. Input Short-Circuit Current(A)	17+17		
No. of MPP Trackers/No. of Strings per MPP Tracker	2/1+1		
Max. Inverter Backfeed Current to The Array	0		
AC Input/Output Data			
Rated AC Input/Output Active Power(W)	3600	5000	6000
Max. AC Input/Output Apparent Power(VA)	3960	5500	6600
Peak Power (off-grid)(W)	2 times of rated power, 10s		
Rated AC Input/Output Current(A)	16.4/15.7	22.7/21.7	27.3/26.1
Max. AC Input/Output Current(A)	18/17.2	25/23.9	30/28.7
Max. Continuous AC Passthrough (grid to load)(A)	35		40
Max. Output Fault Current(A)	36	50	60
Max. Output Overcurrent Protection(A)	80		
Rated Input/Output Voltage/Range(V)	220V/230V 0.85Un-1.1Un		
Grid Connection Form	L+N+PE		
Rated input/Output Grid Frequency/Range	50Hz/45Hz-55Hz 60Hz/55Hz-65Hz		
Power Factor Adjustment Range	0.8 leading-0.8 lagging		
Total Current Harmonic Distortion THDit	80		
DC Injection Current	80		
Efficiency			
Max. Efficiency	97.60%		
Euro Efficiency	96.50%		
MPPT Efficiency	> 99%		
Equipment Protection			
DC Polarity Reverse Connection Protection	Yes		
AC Output Overcurrent Protection	Yes		
AC Output Overvoltage Protection	Yes		
AC Output Short Circuit Protection	Yes		
Thermal Protection	Yes		
DC Terminal insulation Impedance Monitoring	Yes		

FAULT INFORMATION AND PROCESSING



DC Component Monitoring	Yes
Ground Fault Current Monitoring	Yes
Power Network Monitoring	Yes
Island Protection Monitoring	Yes
Earth Fault Detection	Yes
DC Input switch	Yes
Overvoltage Load Drop Protection	Yes
Residual Current (RCD) Detection	Yes
Surge Protection Level	TYPE II(DC), TYPE II(AC)
Interface	
Display	LCD+LED
Communication interface	RS232,RS485,CAN
Monitor Mode	WIFI
General Data	
Operating Temperature Range	-40 to +60 C ,>45 C Derating
Permissible Ambient Humidity	0-100%
Permissible Altitude	2000m
Noise	<30 dB
Ingress Protection(IP) Rating	IP 65
Inverter Topology	Non-Isolated
Over Voltage Category	OVC II(DC), OVC II(AC)
Cabinet size(W*H*D)[mm]	330W×580H×232D (Excluding connectors and brackets)
Weight(kg)	25
Warranty	10 Years the Warranty Period Depends the Final Installation Site of Inverter, More Info Please Refer to Warranty Policy
Type of cooling	Intelligent Air Cooling
Grid Regulation	IEC 61727,IEC 62116,CEI 0-21,EN 50549,NRS 097,RD 140, UNE 217002,OVE-Richtlinie R25,699,VDE-AR-N 4105
Safety EMC/Standard	IEC/EN 61000-6-1/2/3/4, IEC/EN 62109-1,IEC/EN 62109-2

APPENDIX I


APPENDIX I

Definition of RJ45 Port Pin for BMS485

No.	BMS485 Pin
1	--
2	--
3	--
4	485_B
5	485_A
6	--
7	--
8	--

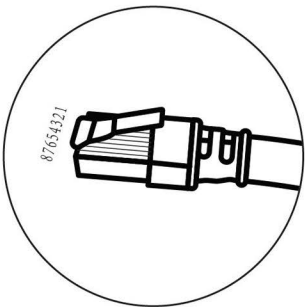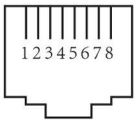


RS 485/METER Port

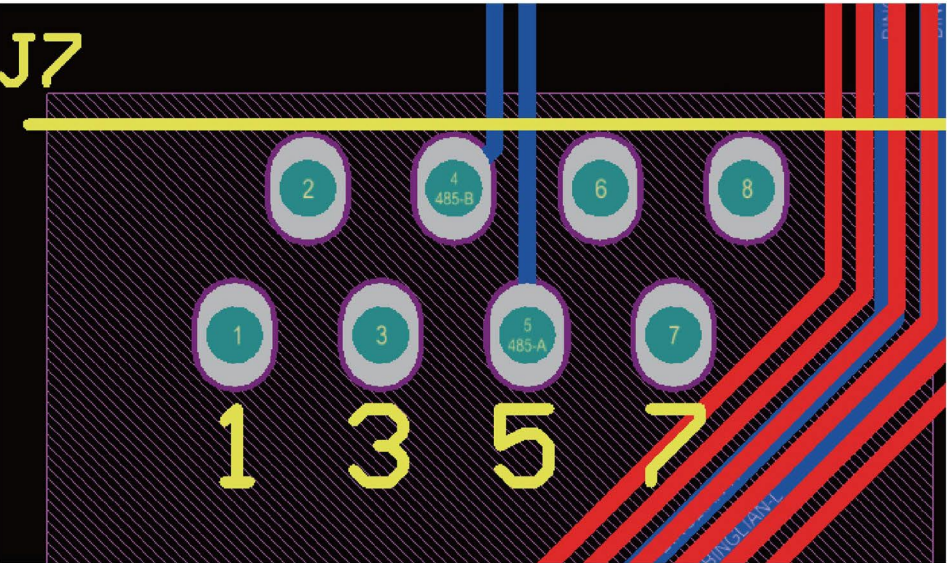


APPENDIX I

Definition of RJ45 Port Pin for BMS485

No.	BMS485 Pin
1	485_B
2	485_A
3	GND_485
4	CAN-H
5	CAN-L
6	GND_485
7	485_A
8	485_B

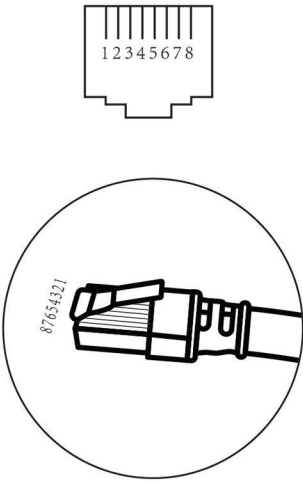


BMS 485/CAN Port

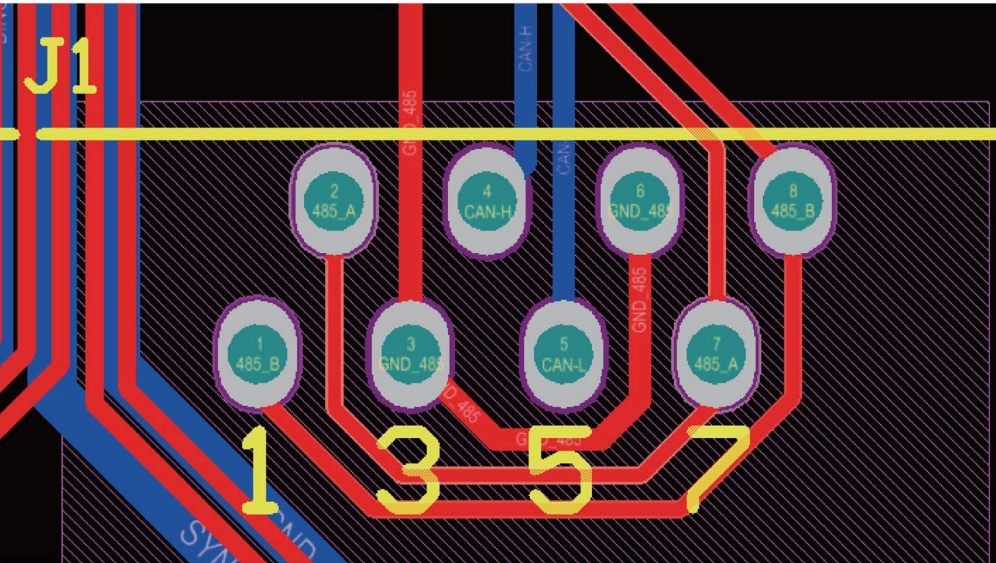

APPENDIX I

RS232

No.	WIFI/RS232
1	
2	TX
3	RX
4	
5	D-GND
6	
7	
8	
9	12Vdc

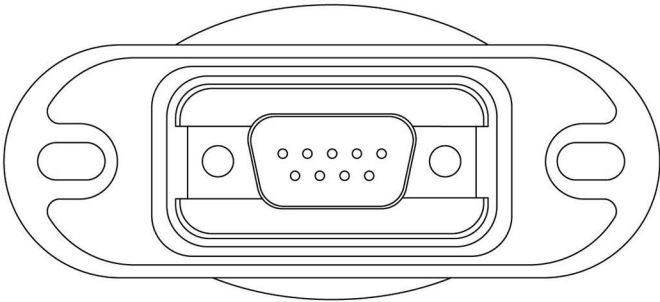


WIFI/RS232

This RS232 port is used to connect the wifi datalogger

APPENDIX II

APPENDIX II

- Split Core Current Transformer (CT) dimension: (mm)
- Secondary output cable length is 4m.

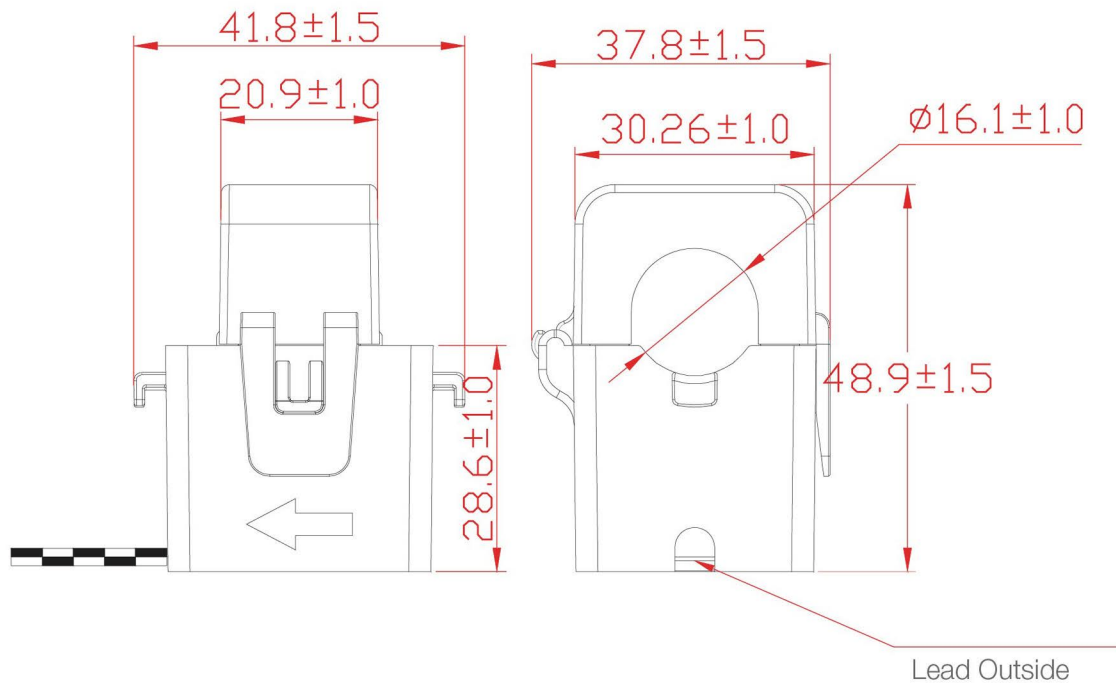

VER:2.3 2024-07-09

Downloaded from <http://ajph.org/> at University of California, San Diego on June 11, 2015

© 2006 The Authors
Journal compilation © 2006 Blackwell Publishing Ltd