


OT CABLE CLAMP E-STYLE

OPTOTRONIC® OT CABLE CLAMP E-STYLE (strain relief) can be snapped onto the compact ECG and thus converts it into an ECG suitable for independent installation.

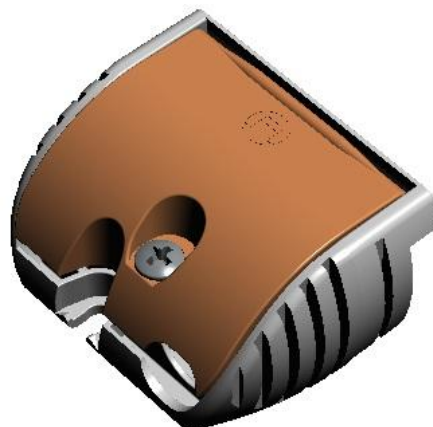


Benefits

- Comfort space for wire assembling
- Only one screw per flap for easy and fast fix of the cables
- Suitable for different cable types


Applications

Independent applications

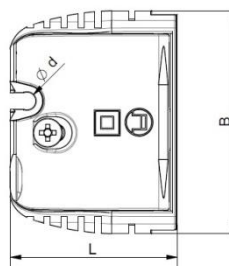

Cable Clamp D-style dimension

L	39,2 mm
B	53 mm
H	25 mm
d	Φ 4,2

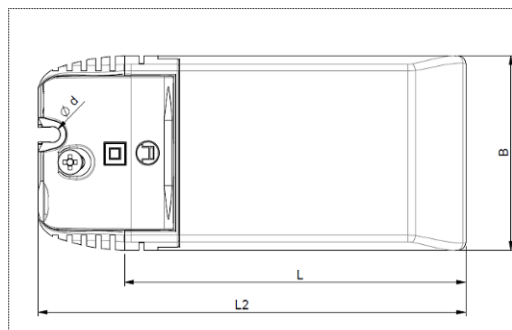

ECG with Cable Clamp E-style dimension

L	95mm
L2	119mm
B	53mm
H	30mm
H2	25mm
d	Φ 4,2



Installation Method



1. Match cable clamp with corresponding ECG (refer to table "Matching ECG" for details).




2. Snap cable clamp into ECG as shown.



3. Unscrew cover for wire installation. Tighten screw after wire installation.

	Item	Value	Unit	Remarks
Basic Data	Cable Jacket Diameter	5.5 - 9.5	mm	See cable below
	Weight	16±1	g	
Tested cable types (acc. IEC 60598-1):	Cable	Wire [mm²]	Outer diameter [mm]:	Cable position
	NYM-J 5x1,5	1,50	9,50	Input side only
	NYM-J 4x1,5	1,50	9	Input side only
	NYM-J 3x1,5	1,50	8	Input side only
	H05 VV-F 3x1.5	1,50	7,8	Input & output side
	H05 VV-F 3x1	1,00	7	Input & output side
	H05 VV-F 3x0.75	0,75	6,5	Input & output side
	H05 VV-F 2x1	1,00	6,5	Output side only
	H03 VV-F 2x0.75	0,75	5,5	Output side only
	2xAWG 22 jacketed cable style 21520	0,76	2,4	Output side only Dedicated clamp
	2xAWG 22 single wires	0,32	0,3	Output side only Dedicated clamp
Matching ECG	Product name	Remarks		
	OTe Phase Cut	see ECG datasheet for details		

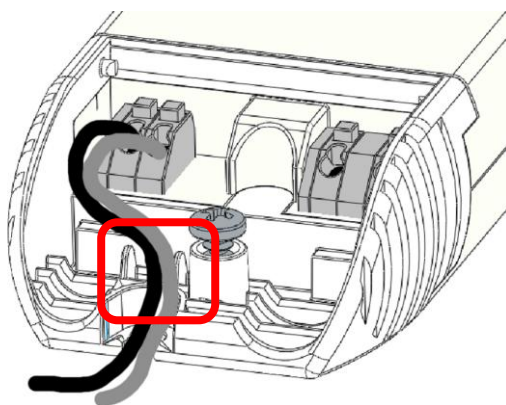

Cable Clamp E-style: thin wires locations

Product name	EAN10	EAN40	Pieces / box
OT Cable Clamp E-style	4052899167896	4052899095861	20pcs

Manufacturer's address:**OSRAM GmbH**Steinerne Furt 62 D-86167 Augsburg
Germanywww.osram.com**Technical support:**Kunden Service Center Germany
+49 (0)89-6213-60 00